

TravelLogic 2 in 1 Analyzer (Protocol + Logic) Manual



Publish: 2020/10

Table of Contents


Chapter 1	Installation and Setting	4
	Hardware Installation	4
	Software installation	5
	Specification Table	7
Chapter 2	Function list and operation	10
	Protocol Analyzer	10
	File.....	10
	Capture	11
	Protocol Settings.....	11
	Operating mode and memory setting	13
	Mode 1 Protocol Analyzer	13
	Mode 2 Protocol Logger	15
	Mode 3 Protocol Monitor	17
	Show Waveforms.....	19
	Search	19
	To the end	20
	Window	20
	Saved as text file.....	20
	Detail window	21
	Statistics window	22
	Hide Data window	23
	Stack Oscilloscope.....	23
	Cursor	24
	Logic Analyzer	25
	File.....	26
	Capture	37
	Quick Setting	37
	Trigger Parameter Setting	38
	• Single Level Trigger	38

• Multi Level Trigger.....	38
• Width Trigger	40
• Timeout Trigger	41
• External Trigger	41
Device Memory Usage	42
Threshold.....	43
Stack Oscilloscope.....	46
Advanced Capture Setting	51
Cursor	55
Waveform Area	58
Report Area	60
Bus decode Settings.....	61
Customized Report Settings	61
Chapter 3 Technical support	62


Chapter 1 Installation and Setting

Hardware Installation


Connect the USB 3.0 cable to the USB slot on the computer. After confirming that the connection is complete, you can turn on the software and connect the signal cable to the object to be tested for observation.

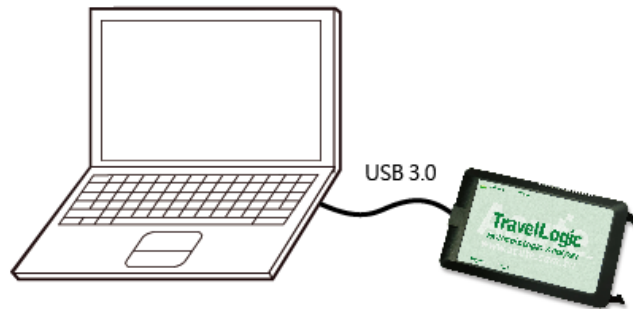


Appearance and functions of the Master:

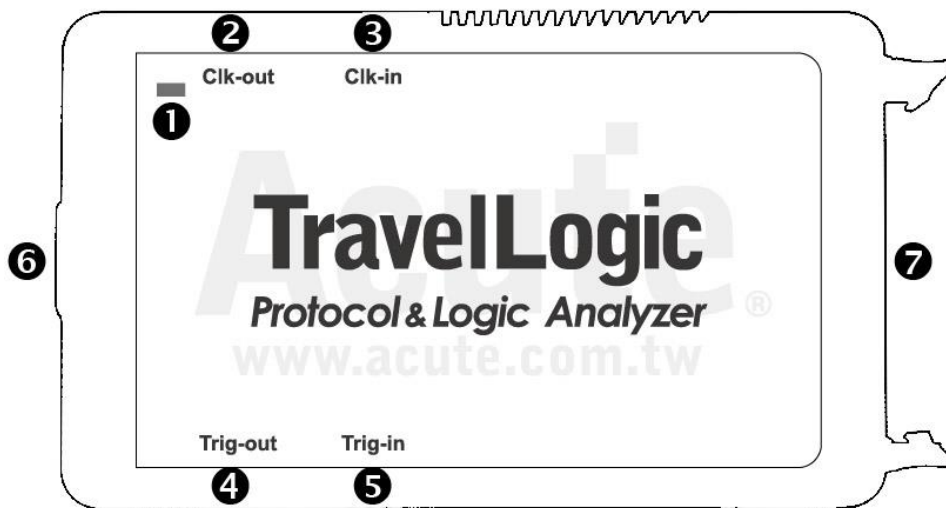


- ❶ Indicator LED
- ❷ Reference clock out
- ❸ Reference clock in
- ❹ Trigger out
- ❺ Trigger in
- ❻ USB 3.0 Type B slot: connected with computer.
- ❼ Pin assignment:

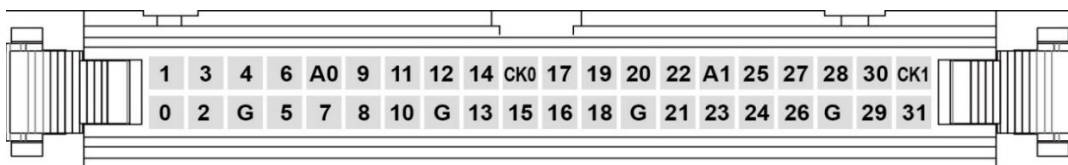

Software installation

Please visit the official website of Acute Technology Inc., go to the Download page, and then select and download the TravelLogic series. After completion of installation, the “start icon” of TravelLogic series will appear on the desktop and the program set. You can select either one to start TravelLogic (). After starting the software, the main menu screen will show up. You can choose to enter logic Analyzer or protocol Analyzer.

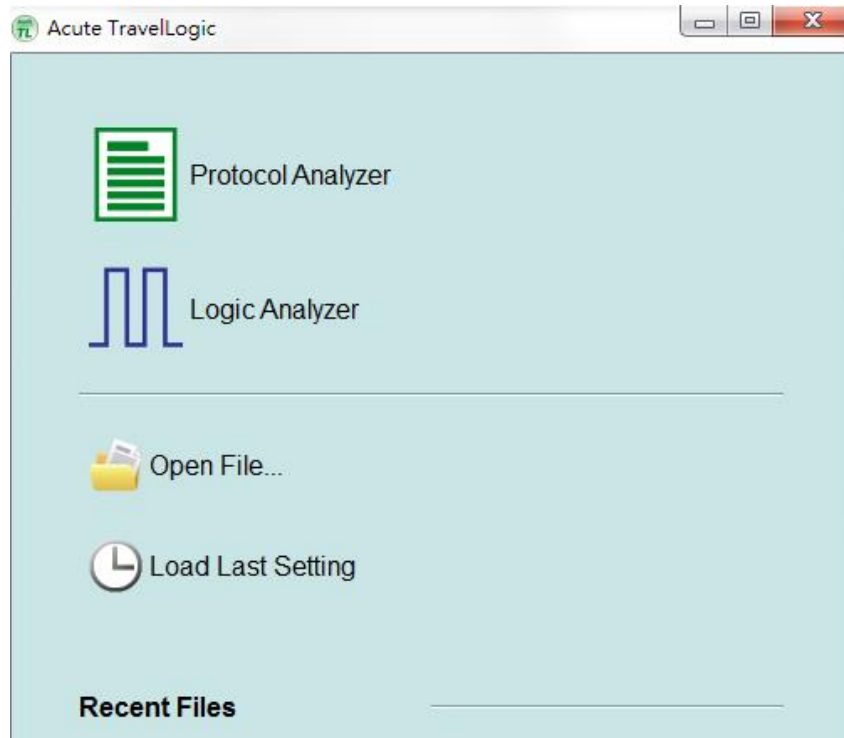


Or after entering the function window, you can select the icon below to add Logic Analyzer or Protocol Analyzer window.



Or click the Add Logic Analyzer or Add Protocol Analyzer window within the file functions.



For the first-time use, the following screen will show up. Please set up the working directory that you will surely use. It is recommended that you choose the hard disk with larger remaining space for the storage of the working directory.

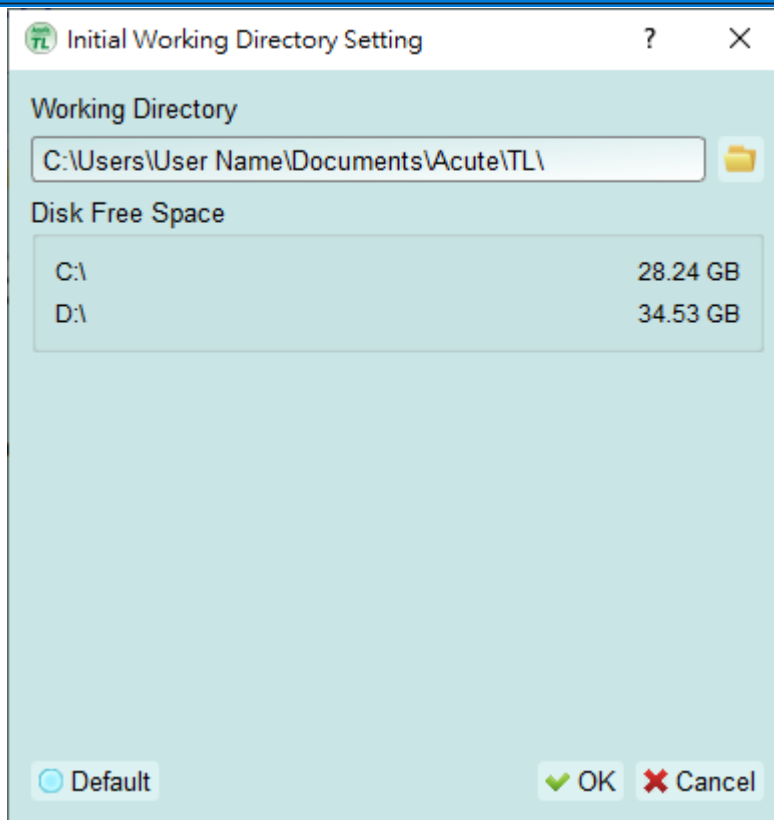

Specification Table

Model		---	TL4134E	TL4134B	TL4234B
		TL3017E	TL3134E	TL3134B	TL3234B+
Power	Power Source	USB bus-power (+5V)			
	Static Power Consumption	0.75W			
	Max Power Consumption	<2.5W			
Hardware Interface		USB3.0			
Timing Analyzer (Asynchronous, Max. Sample Rate)		1GHz			2GHz
State Clock Rate (Synchronous, External Clock)		250MHz / 200MHz			
Storage		Conventional Timing, Transitional Timing			
Channels (Data / Clock / Analog / Ground)		16 / 1 / 1 / 2	32 / 2 / 2 / 4		
Total Memory		16Mb	1Gb	8Gb	
Timing vs. Channels vs. Memory	Timing Analyzer	Available channels(Conventional Timing, Transitional Timing) / Memory per channel			
	2GHz	8 / 2Mb	(8/7)-512Mb (4/3)-1Gb	(8/7)-1Gb (4/3)-2Gb	
	1GHz	16 / 1Mb	(16/14)-256Mb (8/7)-512Mb	(16/14)-512Mb (8/7)-1Gb	
	500MHz	16 / 1Mb	(32/28)-128Mb (16/14)-256Mb	(32/28)-256Mb (16/14)-512Mb	
	250MHz	8 / 2Mb	(32/32)-128Mb (32/32)-256Mb		
	200MHz	8 / 2Mb, 16 / 1Mb	(32/32)-128Mb (32/32)-256Mb		
Channel to channel skew		<1ns			
Threshold	Group	4(ch0~7, ch8~15 & clk0, ch16~23, ch24~31 & clk1)			
	Range	+5V ~ -5V			
	Resolution	50mV			
	Accuracy	±100mV + 5% *Vth			
Input Voltage	Non-Destructive	±30V DC, 12Vpp AC			
	Operation	+10V ~ -10V			
	Sensitivity	0.25Vpp @50MHz, 0.5Vpp @150MHz, 0.8Vpp @250MHz			
Impedance	Data channels	200KΩ // < 7pF			
	Analog channels	20KΩ // < 3pF			
Analog Inputs(2) (Protocol Analyzer)	Maximum (Non-destructive)	-0.5V ~ +8V DC + AC peak			
	Operation	0V ~ 4V			
	Resolution	12bits			
	Sampling Rate	250KHz			
Temperature	Operating/Storage	5°C ~ 40°C (41°F ~ 104°F) / -10°C ~ 65°C (14°F ~ 149°F)			
I/O port	Trig-In	TTL 3.3V level(Rising / Falling)			
	Trigger pulse approval	> 8ns			
	Trig-Out	TTL 3.3V, pulse Width			
	Ref. Clock Input	10MHz, Vpp=3.3 to 5V			
	Ref. Clock Output	10MHz, TTL 3.3V			
	Connector type	MCX jack / female			
Trigger	Resolution	500ps / 1ns			500ps
	Channels	16	32		

	States	16	
	Events	16	
	Pre / Post	Yes	
	Pass Counter	Yes (0~1048575 times)	
	Types	Range, Word, Channel, Width, Time-out, Single / Multi Level	
	TL3000 series		
	Bus I	I ² C	DP Aux ¹ , I ² C, SPI, UART, USB PD3.0
	Bus II	---	BiSS-C, CAN 2.0B/CAN FD, DALI, HID over I ² C, I ² S, I3C, LIN2.2, LPC, MDIO, MII, Mini/Micro LED, MIPI RFEE, Modbus, PMBus, Profibus, RMII, SMBus, SVI2, USB1.1
	Bus III	---	eMMC4.5, eSPI, MIPI SPMI 2, NAND Flash, SD3.0, Serial Flash (SPI NAND), SVID ²
	TL4000 series		
	Bus I	---	BiSS-C, CAN2.0B/CAN FD, DP Aux ¹ , HID over I2C, I2C, I2S, LIN2.2, SPI, UART (RS232), USB PD 3.0
	Bus II		DALI, I3C, LPC, MDIO, Mini/Micro LED, MIPI RFEE, MIPI SPMI 2, Modbus, PMBus, Profibus, SMSBus, SVI2, USB1.1
	Bus III		eMMC 4.5, eSPI, MII, NAND Flash, RGMII, RMII, SD 3.0(SDIO2.0), SVID, Serial Flash (SPI NAND), SVID ²
Protocol Analyzer/ Protocol Logger / Protocol Monitor	TL3000 series		
	I	I ² C	DP Aux ¹ , I ² C, SPI, UART, USB PD3.0
	II	---	BiSS-C, CAN 2.0B/CAN FD, DALI, HID over I ² C, I ² S, I3C, LIN2.2, LPC, MDIO, MII, Mini/Micro LED, MIPI RFEE, Modbus, PMBus, Profibus, RMII, SMBus, SVI2, USB1.1
	III	---	eSPI, MII, RGMII, RMII, SVID ³
	TL4000 series		
	I	---	BiSS-C, CAN2.0B/CAN FD, DP Aux ¹ , HID over I2C, I2C, I2S, LIN2.2, SPI, UART (RS232), USB PD 3.0
	II		DALI, I3C, LPC, MDIO, Mini/Micro LED, MIPI RFEE, MIPI SPMI 2, Modbus, PMBus, Profibus, SMSBus, SVI2, USB1.1
III	eSPI, MII, RGMII, RMII, SVID ³		
Software Features	Zoom In / Out	Yes	
	Language	English / Simplified Chinese / Traditional Chinese	
	Waveform Height	Adjustable	
	Zoom / Report Window	Yes	
	Quick Cursor-positioning	Yes	
	Import Label(s)	Yes	
	Quick Bus Decode Setup	Yes	
	Trigger / Auxiliary cursors	1/25	
	Data Logger	Save to Hard Disk Drive	
	Bus Decode	Refer to the Acute_DeTrig_en.PDF	
	Line Decoding	Biphase Mark, Differential-Manchester, Manchester (Thomas, IEEE802.3), Miller, Modified Miller,	

		NRZI, ...	
	Line Encoding	AMI(Standard · B8ZS · HDB3) · Biphasic Mark · CMI · Differential-Manchester, Manchester (Thomas, IEEE802.4) · MLT-3, Miller, Modified Miller, NRZI, Pseudoternary, ...	
Dimension L x W x H (mm ³)		123 x 76 x 21 (mm ³)	
Lead Cable (Data / CLK / Analog / GND)		A 40-pin lead cable (32 / 2 / 2 / 4)	
Grippers		20	40

¹ Optional DP AUX adapter needed.

² Upon request ONLY by users who have signed CNDA with Intel, SVID decode supported by all TL4000 models.


³ Upon request ONLY by users who have signed CNDA with Intel, SVID trigger & PA supported by TL4234B ONLY.

Specifications marked in BLUE are different from TL3000 series.

Chapter 2 Function list and operation

Protocol Analyzer

File

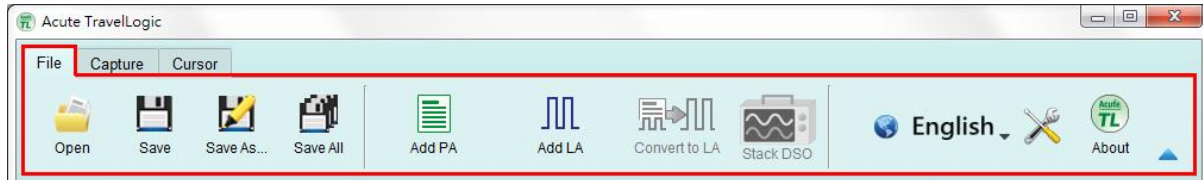

Open file: Load the file



Save file: Save the current window to file



Save as: Save with a new file name with specified storage range



Save all: Save all Protocol Analyzer/Logic Analyzer windows to files




Add Protocol Analyzer: Add a Protocol Analyzer window



Add Logic Analyzer: Add a Logic Analyzer window



Convert to Logic Analyzer: When the “show waveform” capture mode is enabled, you can click this function to transfer the waveform and setting parameters into the Logic Analyzer window and continue to use the Logic Analyzer window to capture Protocol.



Stack Oscilloscope: You may stack a DSO to become a MSO under the Protocol Analyzer mode. But, you must choose the “show waveform” capture mode to capture the protocol data with the waveforms. Then, click the DSO icon to enter the Logic Analyzer window.




Language: Display language. You can select English, Traditional Chinese, or Simplified Chinese



System environment settings: Here you can set the working directory, the label height, whether to load the last setting, the waveform display mode and its color.

Capture




Protocol Settings




Style 1 for those protocols with easy setting

1. **Select the Protocol**
2. **Channel setting**
3. **Waveform Preview:** The signal's waveform and frequency is automatically detected.
4. **Options:** You can set the capture and decoding parameters for Protocol.
5. **Threshold:** It can be set according to the voltage level of the signal.

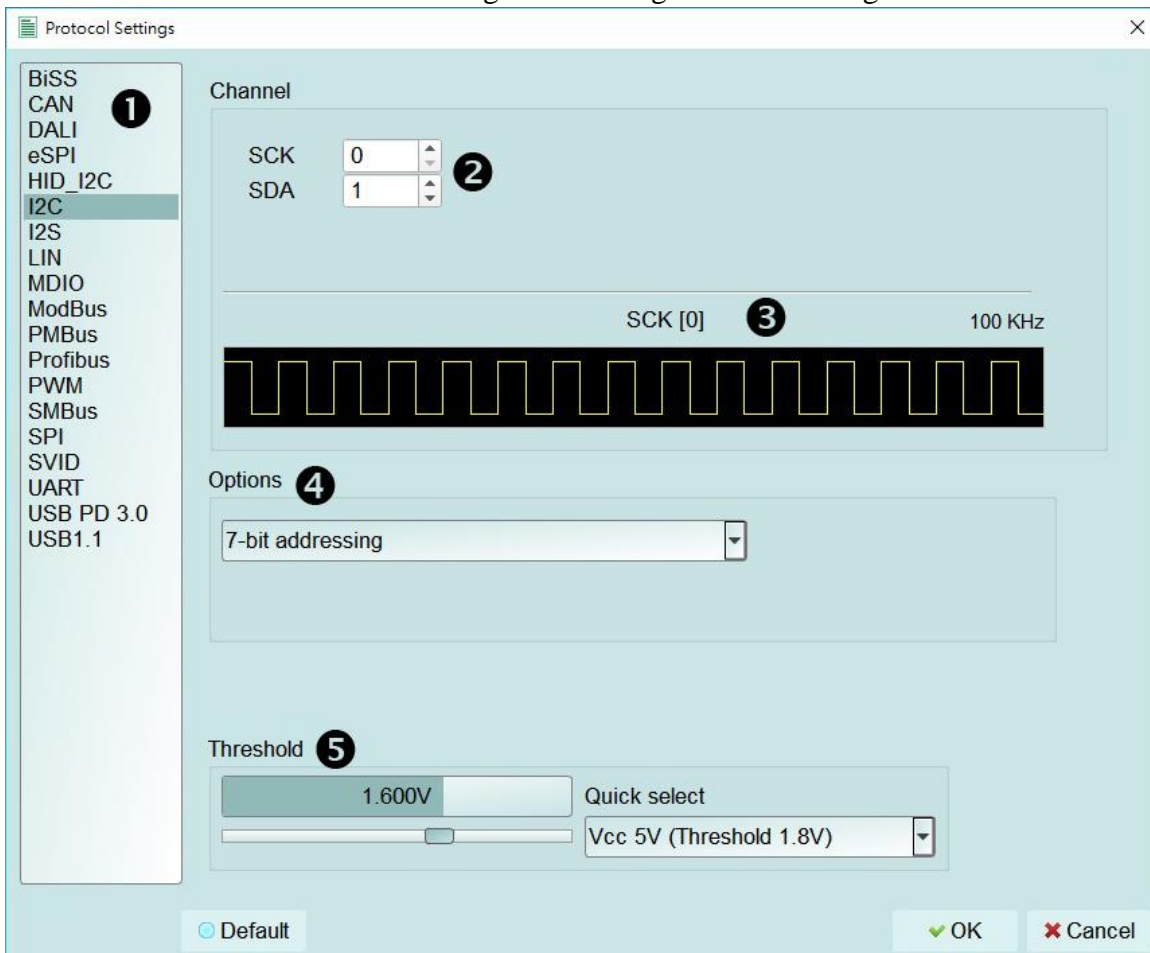


Style 2 for those protocols needs more setting

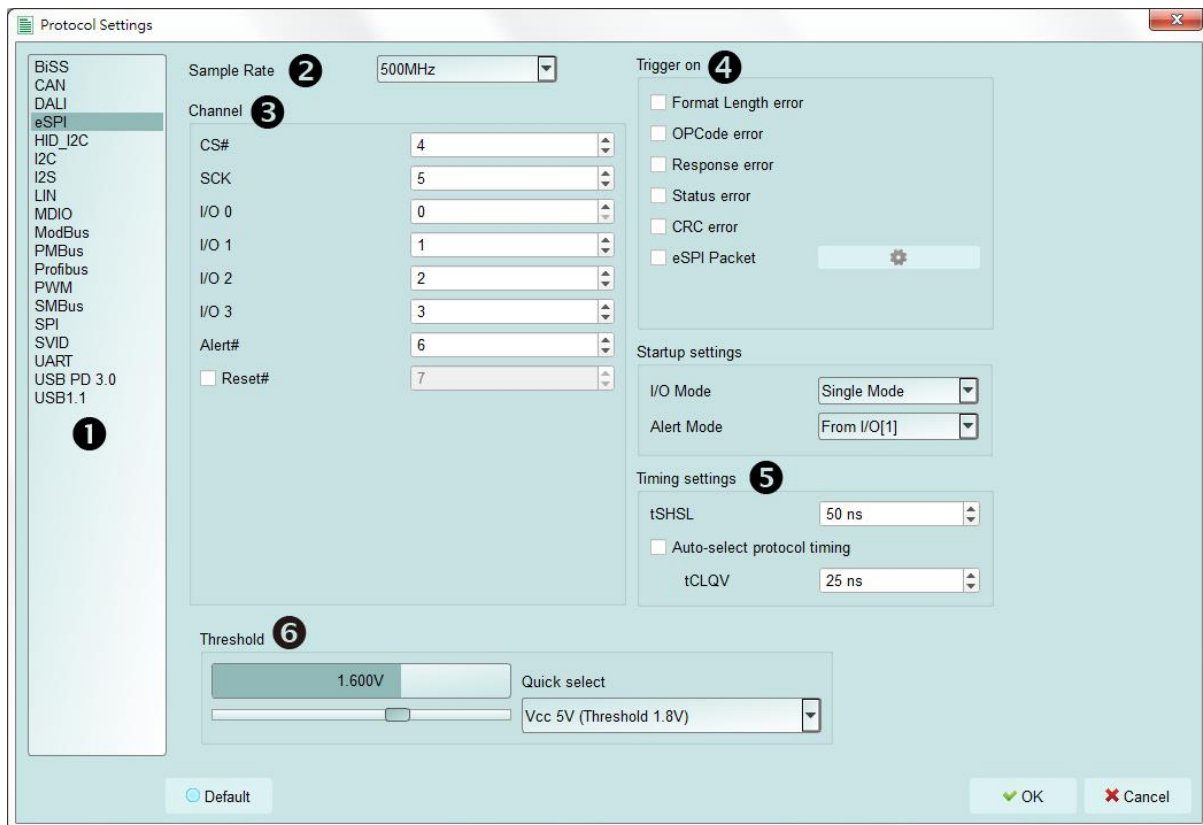


1. **Select the Protocol**
2. **Set the Sample Rate**
3. **Channel setting**
4. **Trigger on**
5. **Options:** You can set the capture and decoding parameters for Protocol.
6. **Threshold:** It can be set according to the voltage level of the signal.

Operating mode and memory setting

There are three modes for operating mode and memory setting ().

Mode 1 Protocol Analyzer

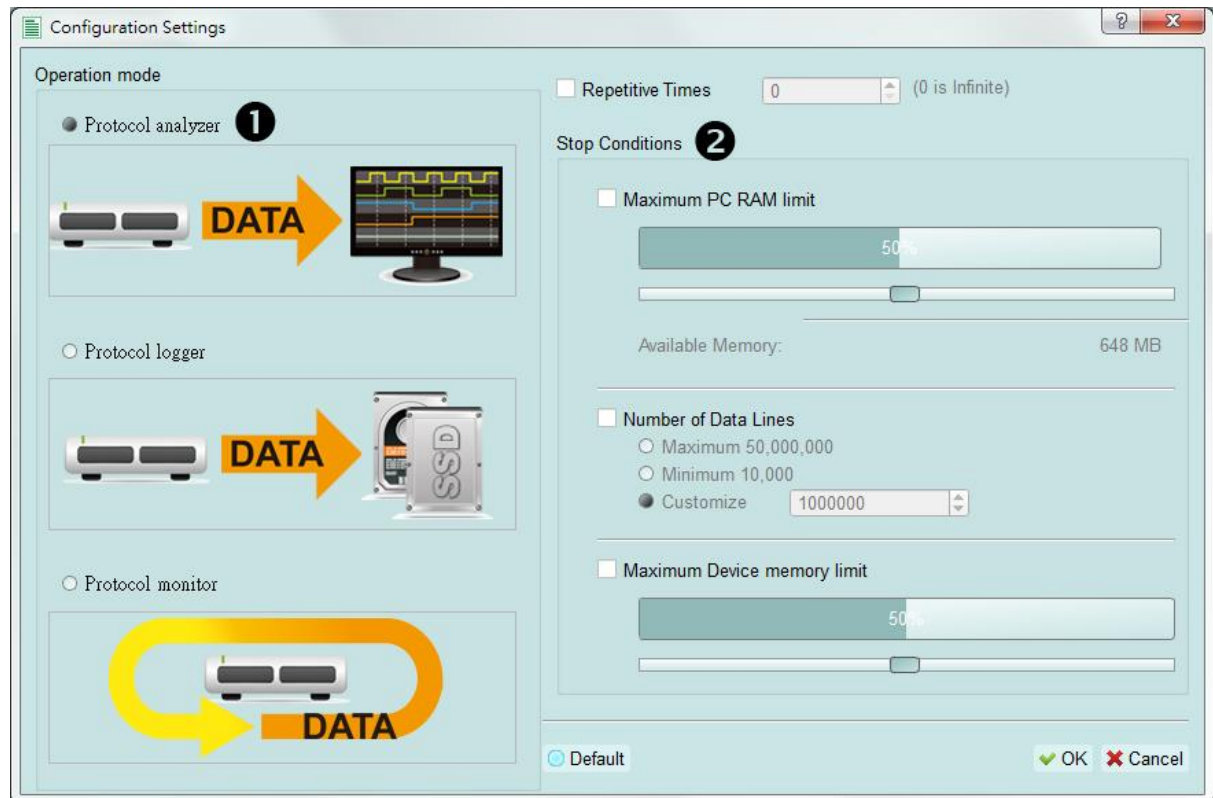

Functional description:

Captured data will be sent back to the PC for real-time display. You can immediately see the protocol data right away.

Rule:

1. Data can be seen immediately.
2. If the amount of captured data is not big, you do not have to set the amount of memory.

Notice for use:

As data will be captured and displayed at the same time, the performance requirement for the USB and the computer will be higher. If the computer cannot handle the data in time, the device may automatically stop due to full memory.

If software is in operation during the capture period, the computer will respond more slowly.

• Rules for repetitive times and automatic stop

Repetitive Times

- If it is not enabled, the device will be stopped after the stop condition matched.
- If it is enabled, the device will be stopped after the stop condition matched, then

save the captured data and repeat the captures again, according to the number of captures that has been set.

- If the number of captures is set at 0, the device will capture data repetitively.

Three **Stop Conditions** to stop the device automatically are provided as follows:

- **Maximum PC RAM Limit**

Stop the capture when the stored data size matched the size of allocated PC RAM, this limitation will avoid excessive use of the PC RAM, which may resulting in insufficient memory and unstable performance of the operating system.


- **Number of Data Lines**

Stop the capture when the stored data line number matched the setup data line number, You can select this function if you need only sufficient number of data lines without capturing data for a long time. This function is set to OFF by default.

- **Maximum Device Memory Limit**

Stop the capture when the device memory is filled to the set condition.

Mode 2 Protocol Logger

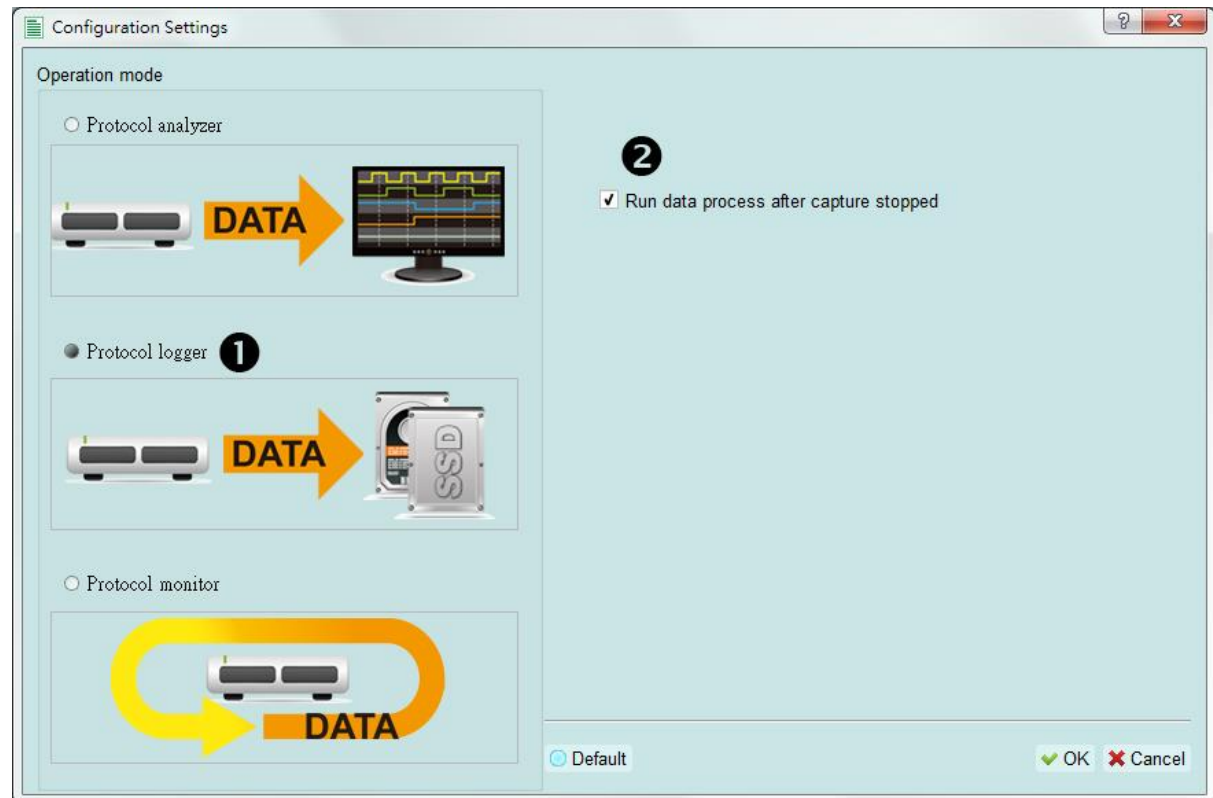

Functional description:

Data will be sent back to the PC for saving without being processed and displayed. Only after the user presses to stop the operation will data begin to be processed and displayed.

Rule:

1. As long as the hard disk is big enough to respond quickly enough, it can save a great amount of data.
2. Logger file (.LOG) can be opened for Analyzer later, no need to analyze them right after their capture.

Notice for use:


1. Performance requirements for the USB and the computer (hard disk) are high.
2. Due to the large amount of logger data, the requirements for the hard disk space and the time for follow-up Analyzer will be very great.

• Run data process after capture stopped

Check this option to process the data after Logger capture stopped, or the software will only save the logger data without analyzing process.


Run data process after capture stopped

You can reload the .LOG file from Load file to re-analyze the data.

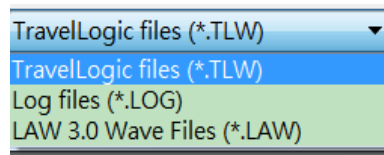

Whether you check the results immediately or load them into the file, the file name will be converted from .LOG to .BFW.

Mode 3 Protocol Monitor

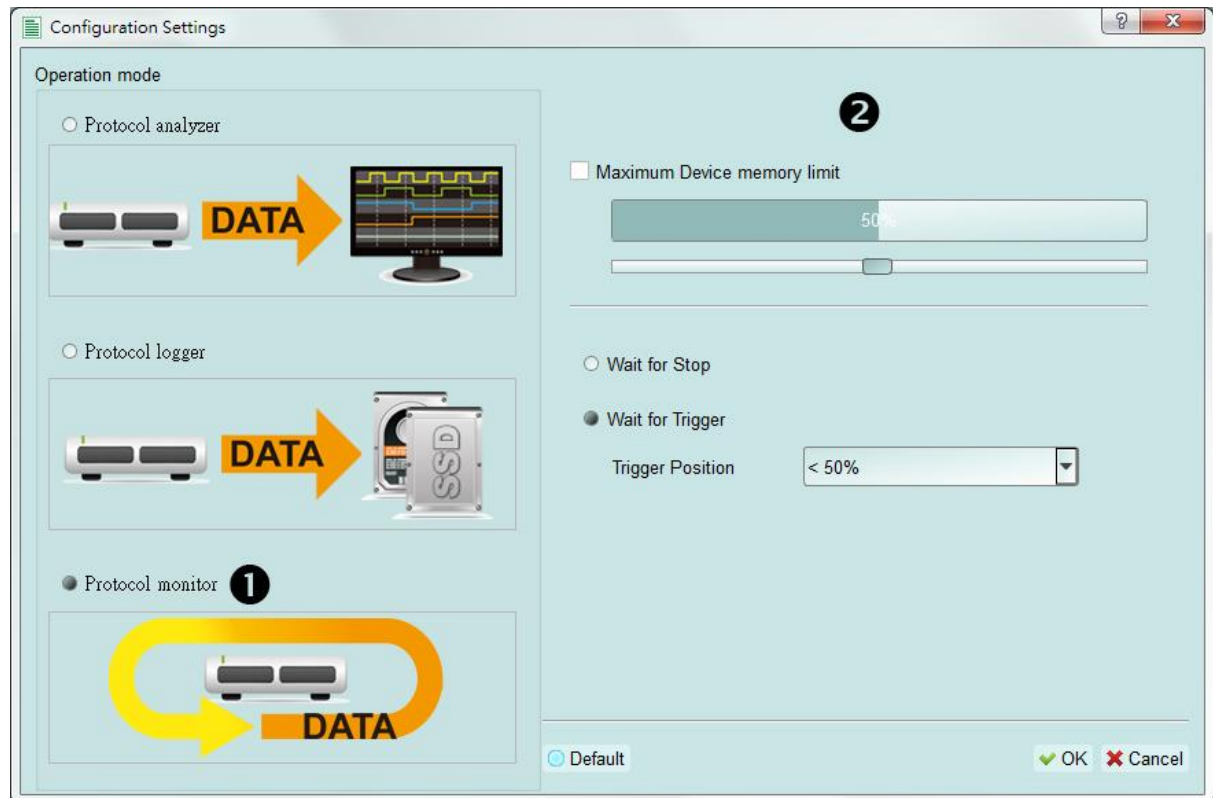

Functional description:

Data will be kept in the device and overwrote the old data without returning to the PC, the capture can be stopped by user manually or by trigger condition matched, then the device will fill the device memory until memory full and return to PC for display.

Rule:

1. During the capture period, data are not returned to the PC, reducing the performance requirements on the USB and the computer.
2. The total amount of data is the total amount of device memory.
3. Trigger conditions can be set and monitored for a long time. Device memory will be filled only when the amount of data matches the trigger conditions.

Notice for use:

1. If the trigger is not set or you have set the trigger but want to retrieve the data before the memory is full, you must manually press “Stop” to send data back to the computer.

- **Work options**

- Maximum Device memory limit

If the checkbox is unchecked, the max memory of the device is used.

If the checkbox is checked, the usage ratio of the device memory can be adjusted; less memory can shorten the subsequent processing time.

- Data capture will continue until “Stop” is pressed (Wait for stop)

Data capture will continue. If memory is full, the new data will be still captured to replace the old data, until “Stop” is pressed. Then the newest data will be sent back to the computer.

- Data capture will continue until the trigger condition is met (Wait for Trigger)

If the trigger condition is not set, there will be no Pre/Post Trigger relationship and only the Capturing will be shown until the device memory is full.

If the trigger condition is set, data will be filled according to the set Trigger Position. Data capture will continue until the trigger condition is met or “Stop” is pressed. Then, data capture will stop and the set memory will be filled.

Show Waveforms




If “Show Waveforms” is selected, the device will capture the waveform data, but show the waveforms only after the capture stops. Selection of Show Waveforms will take up more device memory.

When “Show Waveforms” is enabled, the waveform area will provide the following functions:



1. Bus Decode 

Press this button to refresh the bus decode.

2. Stop the bus decode 

This button can stop the bus decode right away.

3. Add User Notes 

4. Waveform zoom in / out  


This button can scale up or down the waveforms, but it is recommended to use the mouse cursor to zoom the waveforms in or out for your convenience.

Search



Search function can search data in the report window.

1. Enter the search text

A mark will appear in front of the data meeting the search criteria. 

2. Search the previous piece / the next piece of data.
3. Specify all fields or target fields for search.

Specify fields for search can reduce the search range, thus speeding up the search.

In actual search, the searched data will be shown in green background color together with the total number of packets found. 'CMD' 5556 Packets found If no data is found, the search result will be shown in orange background color. Search text 'CMD99' not found!

To the end



When viewing data, you press this button to move directly to the last end of data. If you press this button while the device is capturing data, the most up-to-date data will be displayed.

Window



Select to enable/disable multiple display lists, such as: Search List, Statistic List...etc.

- Search List
- Trigger List
- Statistic List
- Bookmark List

Search List
 Trigger List
 Statistics List
 Bookmark List
 1

Statistics List ⊞ ⊠

⏪
⏩
1 / 2074
 ⏴
⏵
+
-
⏶
⏷


Line No.	Timestamp	Status	Address	RW	Data
2	0.000.155.560 0	Start	12*	Wr	10* 20* 30*
5	0.001.017.660 287.08us	Start	12*	Wr	10* 20* 30*
8	0.001.879.760 287.08us	Start	12*	Wr	10* 20* 30*
11	0.002.741.860 287.08us	Start	12*	Wr	10* 20* 30*
14	0.003.603.980 287.10us	Start	12*	Wr	10* 20* 30*

1. Select to display different display list.
2. Use the control buttons to move the current position, or input row number to jump to specified row.
3. Use the control buttons to add/remove selected row to Bookmark List.

Saved as text file



Contents of the report may be saved as .TXT or .CSV.

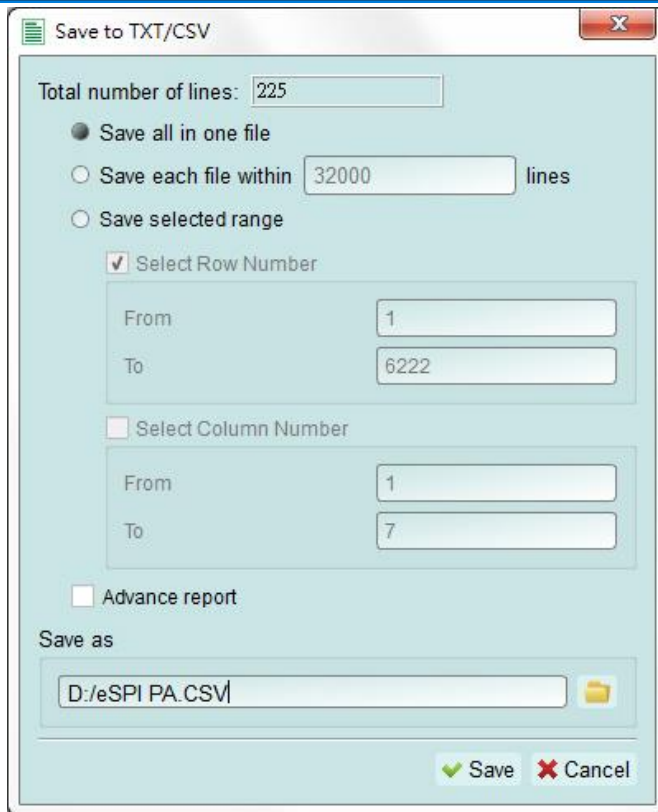


Save options:

1. You can select to save the data as a file or according to the number of rows.
2. Advanced reports

If detailed data should be saved in the protocol Analyzer, you should tick this option.


Detail window

Many Protocols are equipped with a large number of numerical data, which cannot be appropriately displayed all together in the report window. Therefore, you can use the mouse to click the Data field on the report window to display the data in the detail window.

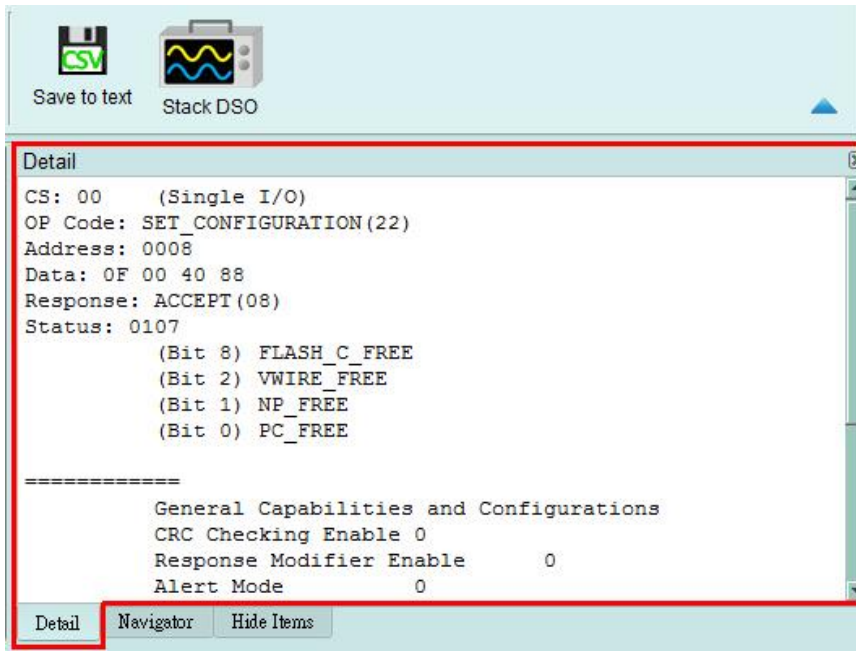


Statistics window

Data statistics are made according to the different characteristics of Protocols, so as to facilitate the understanding of the entire transmission situation, you may also click on the statistic trace to summarize all records of the selected trace into the statistic list window.

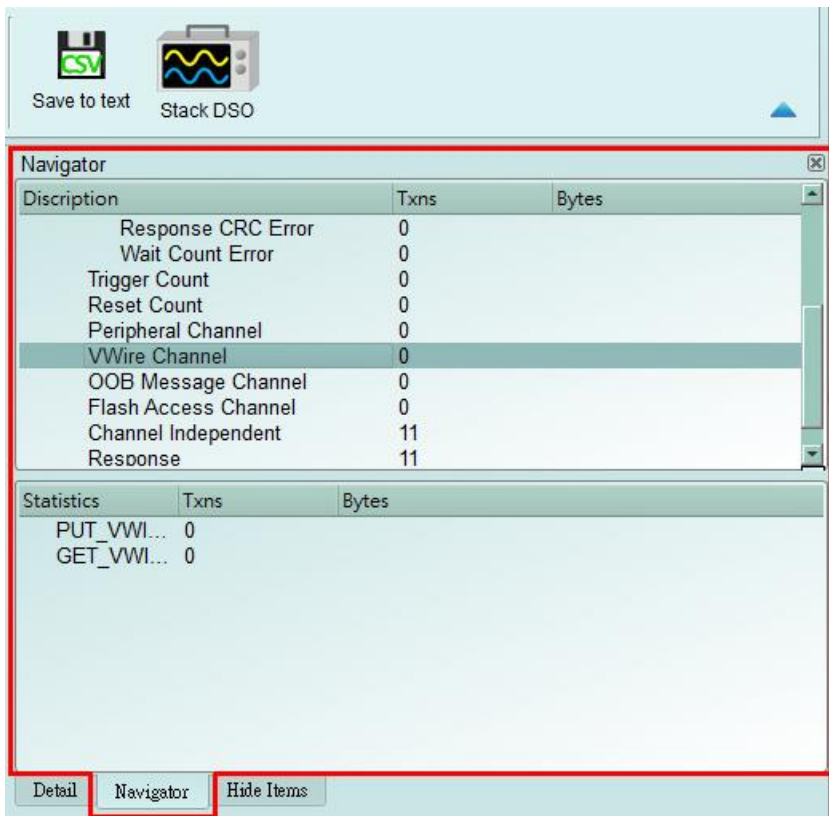


Hide Data window

In this screen, you can select to hide the data items. Software is used in this function to hide data and to restore the data as long as you click the “Clear” button.

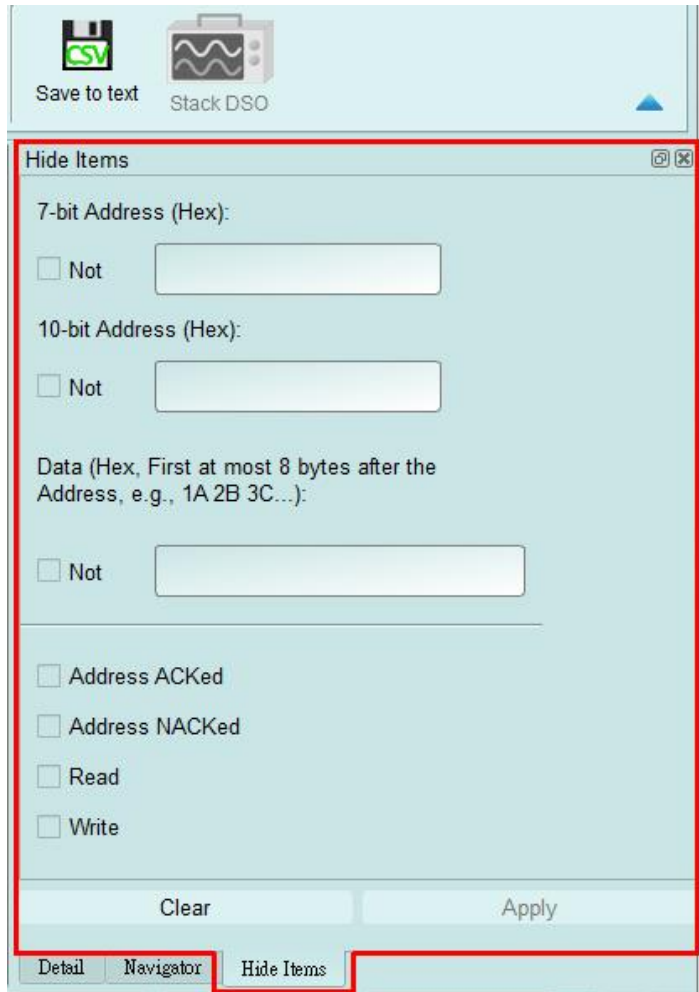


Stack Oscilloscope



The stack oscilloscope can only be enabled in the Logic Analyzer mode. If you want to enable the stack oscilloscope in the protocol Analyzer mode, you must first press the "Convert to Logic Analyzer and Stack Oscilloscope" button to switch to the Logic Analyzer mode to enable this function. It should be noted that you must open Show Waveforms in the Protocol Analyzer mode and capture the data / waveform to switch.




Cursor

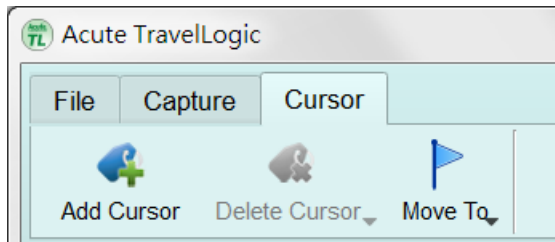

This function includes the cursor setting and the waveform search function matching the cursor.



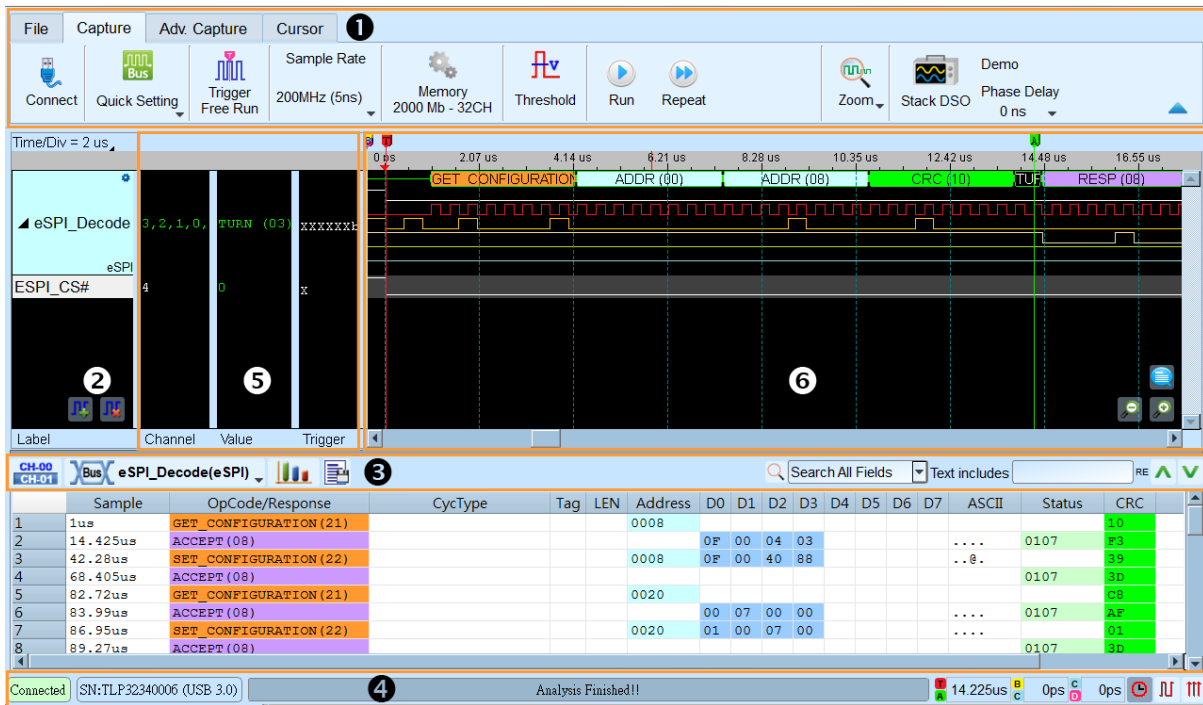


Logic Analyzer



1. **Toolbar:** Including trigger, sampling rate, threshold and other capture parameters.

2. **Channel Label:** You can use the icon ( ) below to add and delete the channel.

Pressing mouse left button on the channel label to change the channel parameter settings; Click the gear button on the top-right corner of the Bus channel to change the advanced parameter settings; Select and drag a channel label to other channel label to combine two or more channel labels.


3. **Report Window Toolbar:** In the report window, you can choose to display the channel data ( ) or decode result () , waveform statistics () , and report the result as .CSV and .TXT output () .

4. **Status Bar:** Connection status of the device is displayed.

5. **Info:** Display channel, Value and Trigger information, can be selected to Show/Hide in Environment settings.

6. **Waveform Area:** Mouse wheel can be used to zoom in/out the waveform scale; press Shift + Key to place cursors to calculate the time interval or frequency. Please refer to the cursor section below for the cursor usage.

File

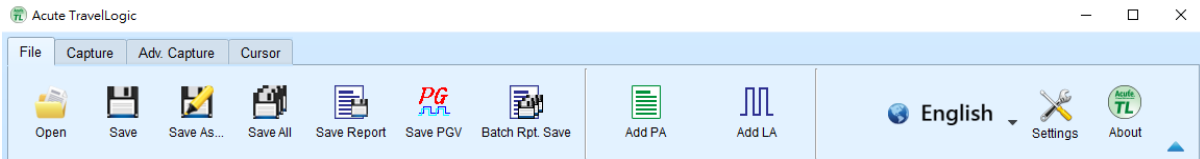

Open file: Load the file



Save file: Save the current file



Save as: Save with a new file name and may set the storage range




Save all: Save all files at once



Saved as a PGV file:

Convert captured waveform to PGV format for the Acute Digital Pattern Generator (PKPG, PG2000), which can be used to resend the digital signals.

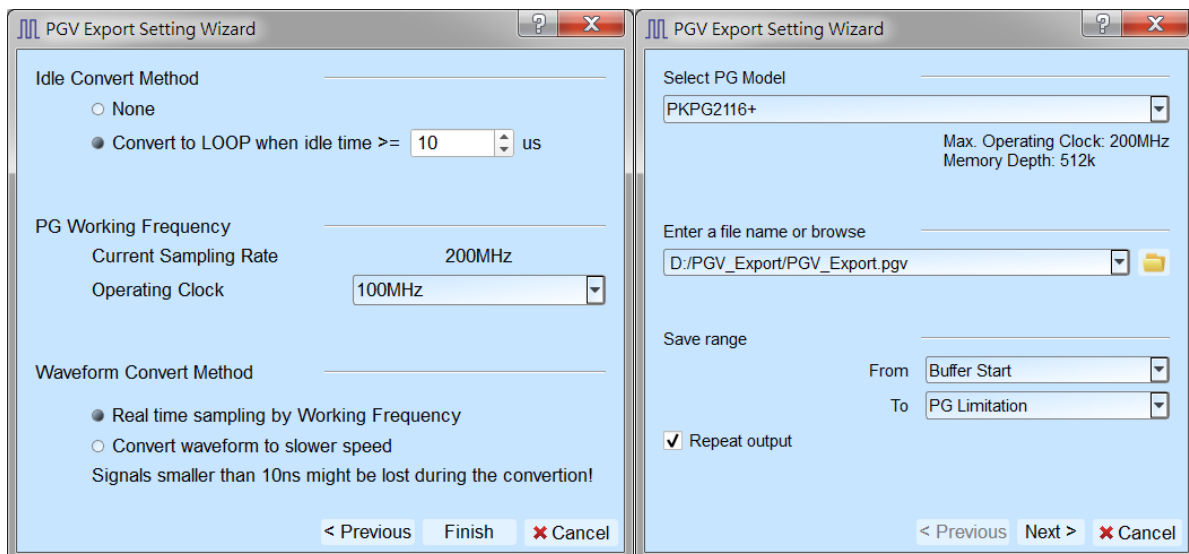

1. Select PG Model

The software will check the maximum working frequency and memory depth according to the selected PG model.

2. Enter a file name or browse

Enter a file name and directory to save the converted PGV file.

3. Save range

Select the waveform range to convert to PGV file, you may select either waveform within cursor range, or select maximum available range according to PG's maximum

memory. (Exported file size larger than PG's maximum memory may not be opened by the PG's software.)

4. Repeat output

Check to add "Jump to start" command at the end of PGV file.

5. Idle Convert Method

Select to replace signal pulse width greater than specified time to a short block of waveform with Loop instructions to save the PG's memory. (The waveform will become more complicated and not easy to read/edit after enable this option.)

6. PG Working Frequency

Specify the PG working frequency.

7. Waveform Convert Method


When the LA's sampling frequency is faster than the PG's working frequency, the software provides two different ways to convert the PGV waveform, one is the real time sampling mode with PG's maximum working frequency (Small signal might be lost during the conversion), the other is convert the original high speed waveform to slower PGV waveform (Slower signal speed might introduce some signal timing issue since the setup/hold time will also be changed).




Import CSV (Require hardware device connected)

LA can convert digital or analog data stored in text format to TLW format file, and turn on viewing waveforms and analysis. This function is located in the toolbar -> File ->

Import CSV

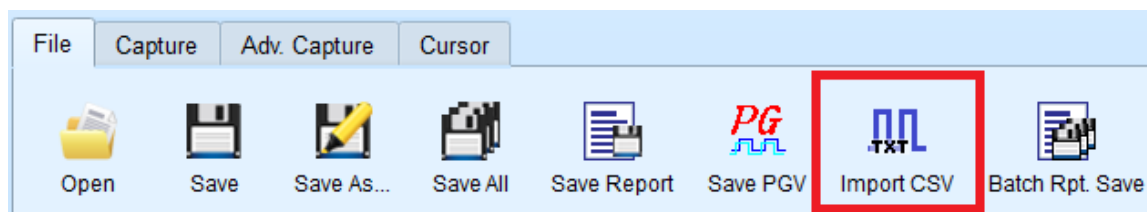

After opening, you can see a variety of formatting options. Select the loading format and file name to start the conversion. If you select DSO Text File or LA Text File, you must go to the next step for advanced settings. Please be noted that the DSO Text File format will only be enabled when you have the BF6264B, LA3068B, LA3134B, TL3134B or TL3234B+ device connected.

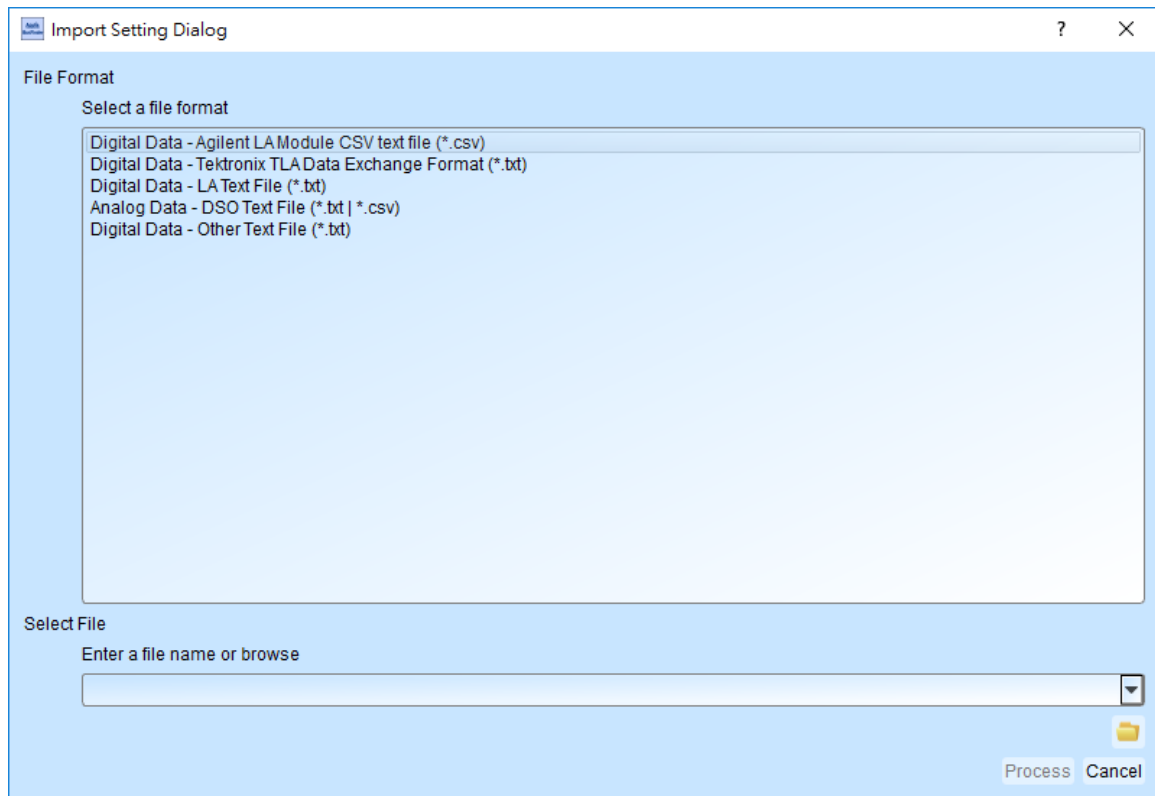

1. Agilent LA Module CSV text file

After the file is opened by the Agilent LA software, the data can be exported through Export. Note that only the waveform file exported by the Module CSV text file is supported here.

(You can find the option to export Module CSV Text File in Toolbar -> File -> Export... after opening .Ala file)


2. Tektronix TLA Data Exchange Format

After opening the file by the TLA software, first click the File->Export Data... button after outputting the top of the List screen. Note that only the TLA Data Exchange Format is supported here. Change to TLA Data Exchange Format.

3. LA Text File

This format still requires further confirmation of separators, data start and time fields, etc. after the file is selected.

The data start line default will be treated as the channel label name

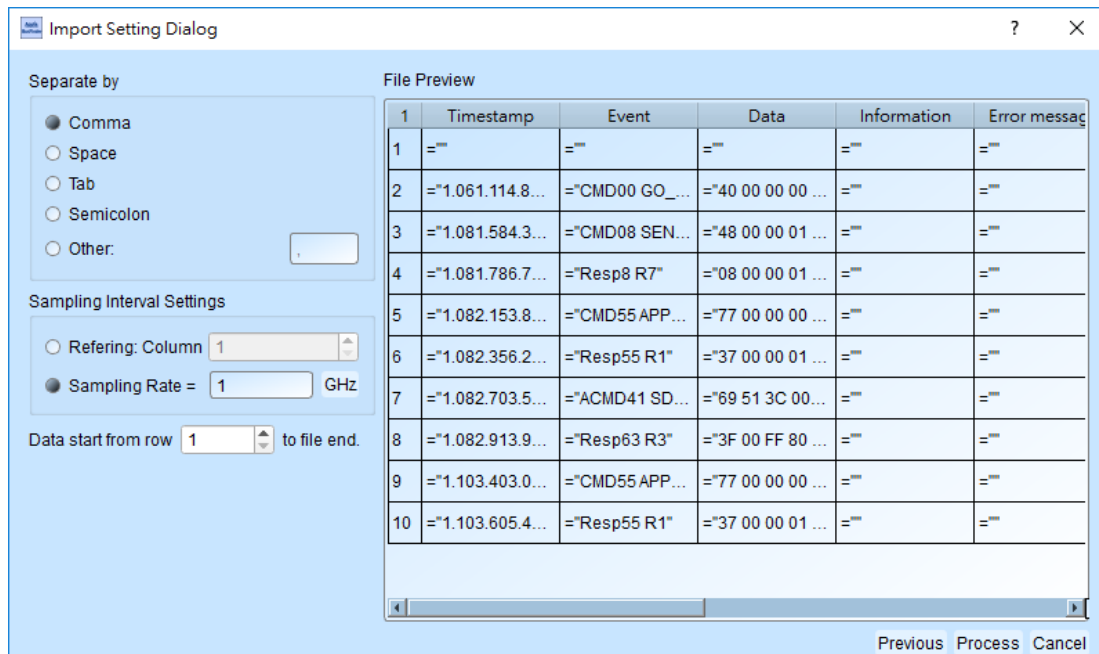

4. DSO Text File

When selecting the DSO waveform, multiple files can be selected for import. After the data is added, the data processing mode can be set individually.

The program default will check if the first ten lines of data are:

- (1). Sample Rate/Sample Interval
- (2). Trigger Position

And automatically entered the information into the settings

It is important to note that the numerical basic unit must be specified by the user


Ex: the default voltage unit is mV

Data 1357 will be interpreted as 1.357V

Basic unit selection uV

Data 135790 will be interpreted as 0.13579V

When analyzing with the differential signal mode, it should be noted that the settings of the positive and negative channels must be the same, and the number of positive and negative channels must be matched to be able to analyze.

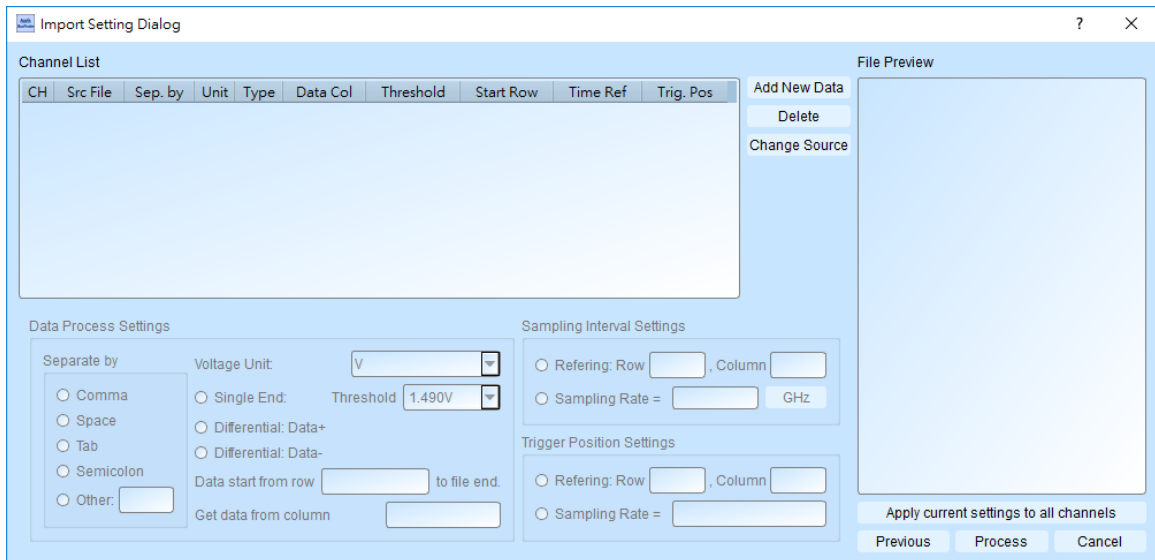


- The user can import waveforms from other logic analyzer into LA for analysis by arranging waveform data according to the following format.

//Channel name:	io	*A0	*A1	*A2	*A3	*A4	*A5	*A6	*A7	cle	ale
-16.86195ms	I	0X00	0	0	0	0	0	0	0	0	0
-16.861945ms	I	0X00	0	0	0	0	0	0	0	0	0
-16.86194ms	I	0X00	0	0	0	0	0	0	0	0	0
-16.861935ms	I	0X00	0	0	0	0	0	0	0	0	0
-16.86193ms	I	0X00	0	0	0	0	0	0	0	0	0
-16.861925ms	I	0X00	0	0	0	0	0	0	0	0	0
-16.86192ms	I	0X00	0	0	0	0	0	0	0	0	0
-16.861915ms	I	0X00	0	0	0	0	0	0	0	0	0
-16.86191ms	I	0X00	0	0	0	0	0	0	0	0	0
-16.861905ms	I	0X00	0	0	0	0	0	0	0	0	0
-16.8619ms	I	0X00	0	0	0	0	0	0	0	0	0
-16.861895ms	I	0X00	0	0	0	0	0	0	0	0	0



Batch Rpt. Save: Store the decode report to .CSV file from multiple captured waveform files.

Batch Report Save Dialog ↓

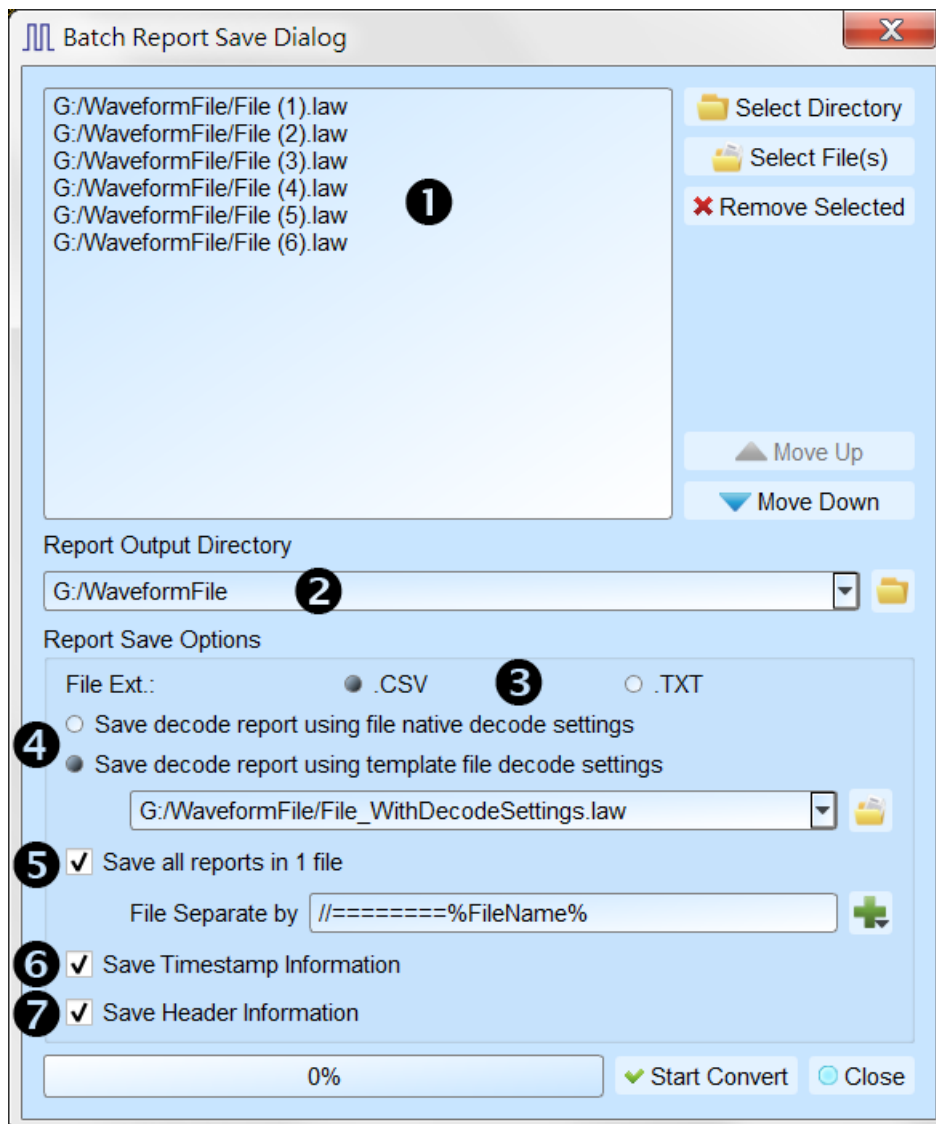

1. Select the source waveform files, accepting file formats including Acute Logic Analyzer Waveform File .TLW or .LAW.
2. Select the file directory to save the converted report file, the saved file will be saved with source file name with different extension name.
3. Select the saved file extension to .CSV or .TXT.
4. Select to use the decode settings in each file, or use the decode settings in specified file to generate the decode report.
5. Select to save the report in separated files or combine all reports into on file with separation text.
6. Select to include the timestamp column information.
7. Select to include the Header column information.



Add Protocol Analyzer: Add a protocol Analyzer window



Add Logic Analyzer: Add a logic Analyzer window



Language: Display language. You can select English, Traditional Chinese, or Simplified Chinese



System environment settings: Here you can set the working directory, the label height, whether to load the last setting, the waveform display mode and its color.

Environment Settings



Property	Value
Default Label Height	<input type="text" value="45"/>
Working Directory	C:\Users\sam18\Documents\Acute\MSO\
Waveform Display Type	Timing Value
Expanded Waveform Color	Change by channel
Load Last Environment on Software Start	<input type="checkbox"/>
Save Waveform After Each Acquisition	<input type="checkbox"/>
Repeat Acquisition Behavior	No Decode and Waveform Display
Display Row Number in LA Decode Report	<input checked="" type="checkbox"/>
Trigger Out Pulse Width (us)	<input type="text" value="Default"/>
Show Waveform Value Tooltip on Cursor Position	<input checked="" type="checkbox"/>
Auto-reconnect device	<input checked="" type="checkbox"/>
Show Channel Information In Waveform Display	<input checked="" type="checkbox"/>
Show Value Information In Waveform Display	<input type="checkbox"/>
Show Trigger Information In Waveform Display	<input type="checkbox"/>
Show Channel Activity In Waveform Display	<input type="checkbox"/>
Use Multicore Processing	<input checked="" type="checkbox"/>
Display Report Timestamp Information	Show Timing With Date Time Info.
Show Cursor Position In Decode/Transition Report	<input checked="" type="checkbox"/>
Show Cursor Separate Time on Cursor bar	<input checked="" type="checkbox"/>
Cursor Font Size in Report Area	<input type="text" value="6"/>
Report Data Display Byte Number	8
Display Waveform Time Scale Dash Line	<input checked="" type="checkbox"/>
Enable Label Combine by Mouse Dragging	<input checked="" type="checkbox"/>
Max. Logic Analyzer Cursor Measurement Tab Count	3

Default

OK

Cancel

1. Default Label Height: Modify the channel height of the waveform area.
2. Working Directory: The directory where the temporary files and waveforms are stored when the software is in operation.
3. Waveform Display Type: Select which information to display between waveform edges.

You can select either display time value, logic value or not to display.

4. Expanded waveform color: You can choose whether the colors are different between channels.
5. Load Last Environment on Software Start: When the software starts, load the settings as the file that was previously closed, waveforms will not be loaded.
6. Save Waveform After Each Acquisition: This file is stored in the working directory.
7. Repeat Acquisition Behavior: Whether to display waveform decoding, to display, choose display time (1/2/5 s).
8. Display row number in LA Decode Report: Show row number on the left to the reporting area.
9. Trigger Out Pulse Width (us): The default length is from trigger point to the end of capture.
10. Show Channel Information in Waveform Display: Show numbers of used channels, show additional names for bus decode.
11. Show Value Information in Waveform Display: Displays the value at the position of the current selected cursor. It shows 0 or 1 on digital channels, voltage value on analog channels, and parallel bus value on bus channels. If it is a protocol channel, it also shows decode information in the same column. Please refer to the [cursor](#) section for detailed instruction.
12. Show Trigger Information in Waveform Display: Display trigger setting values.
13. Show Channel Activity In Waveform Display: Sum up the change types of the edge channel of the captured waveform.
14. Use Multicore Processing: Use multi-core to speed up data processing.
15. Display Report Timestamp Information: Display the timestamp column with timing info format / timing info with date time format (trigger point is at 0 s) / sample count format.
16. Show Cursor Position in Decode/Transition Report: Show cursor position in the report area time field.
17. Show Cursor Separate Time on Cursor bar: Add additional time between cursors on the horizontal timeline of the waveform area.
18. Cursor Font Size in Report Area: Cursor font size for cursor position in

decode/transition report (refer to item 16).

- 19. Report Data Display Byte Number:** This is an item set for protocol analyzer mode, and you can modify the report field to show the number of Bytes.
- 20. Display Waveform Time Scale Dash Line:** Add dash lines on the waveform area to correspond time line to report area.
- 21. Enable Label Combine by Mouse Dragging:** Use the left mouse button to drag a channel label onto another channel label to combine channels.
- 22. Max. Logic Analyzer Cursor Measurement Tab Count:** Displays the number of groups of cursor measurement values in the lower right corner. Minimum of 3 groups, maximum of 10 groups.

Keyboard Shortcuts

Function	Key
Move to cursor position	A-Z
Add a cursor to the mouse position	Shift + A-Z
Start capture	Enter
Stop capture	ESC
Search	F3 or Ctrl+F
Zoom In on waveform area	Number Pad +
Zoom Out on waveform area	Number Pad -

Capture



Quick Setting




Required channels and related settings can be established quickly. If you specify to establish the bus decode, the sampling rate and threshold will be set according to the default conditions.

Trigger Parameter Setting



• Single Level Trigger

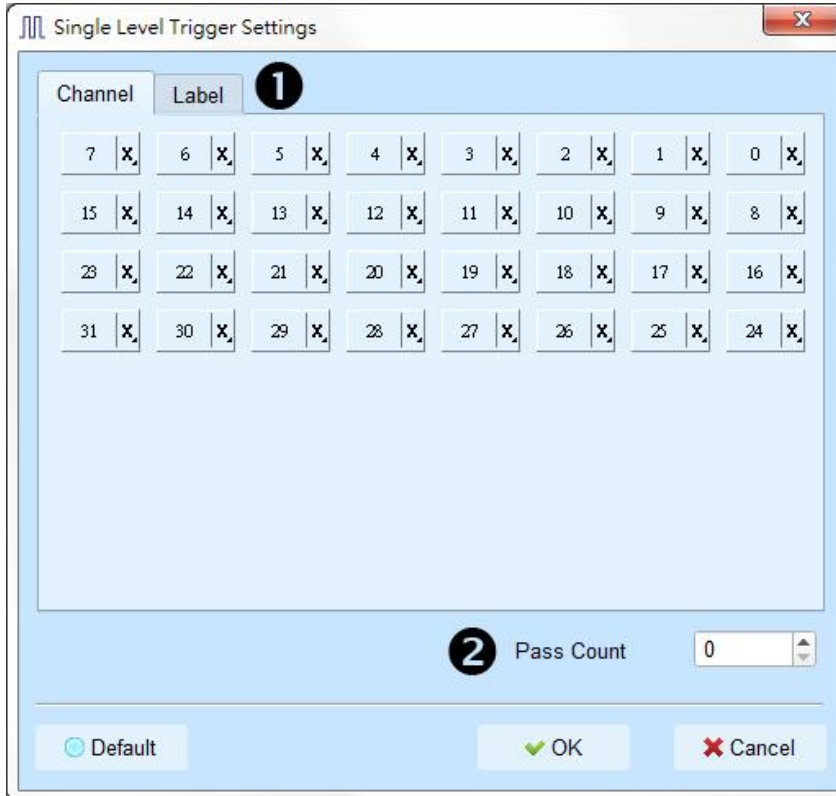

23. Channel / Label: You can select Don't care (X), Rising Edge (\uparrow), Falling Edge (\downarrow),


Low (0), High (1), Either (\updownarrow) or specified Value as trigger conditions.

24. Pass Count: The number of triggering signals that match the trigger parameters is

ignored. It is preset as 0 by default to indicate that it is not ignored.

• Multi Level Trigger


Multi Level triggering is composed of multiple single-stage trigger conditions. This function can have up to 16 states, each of which must be set separately and set in the same way as the single level trigger. When adding a new state, you can press the button on the top to select the relationship between each state. The relationship between each state can be a continuous trigger (Next IF) or a non-continuous trigger (Then IF).

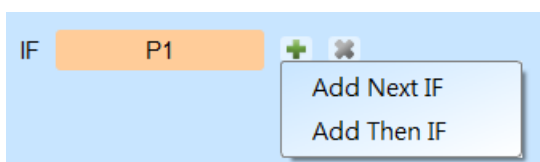

1. Schematic diagram of the current set of trigger conditions

2. Trigger conditions setting

As shown in the following diagram, the first and the second classes are continuous trigger, the relationship between the second and third classes are non-continuous trigger, and the third, fourth, fifth and sixth classes are continuous trigger.

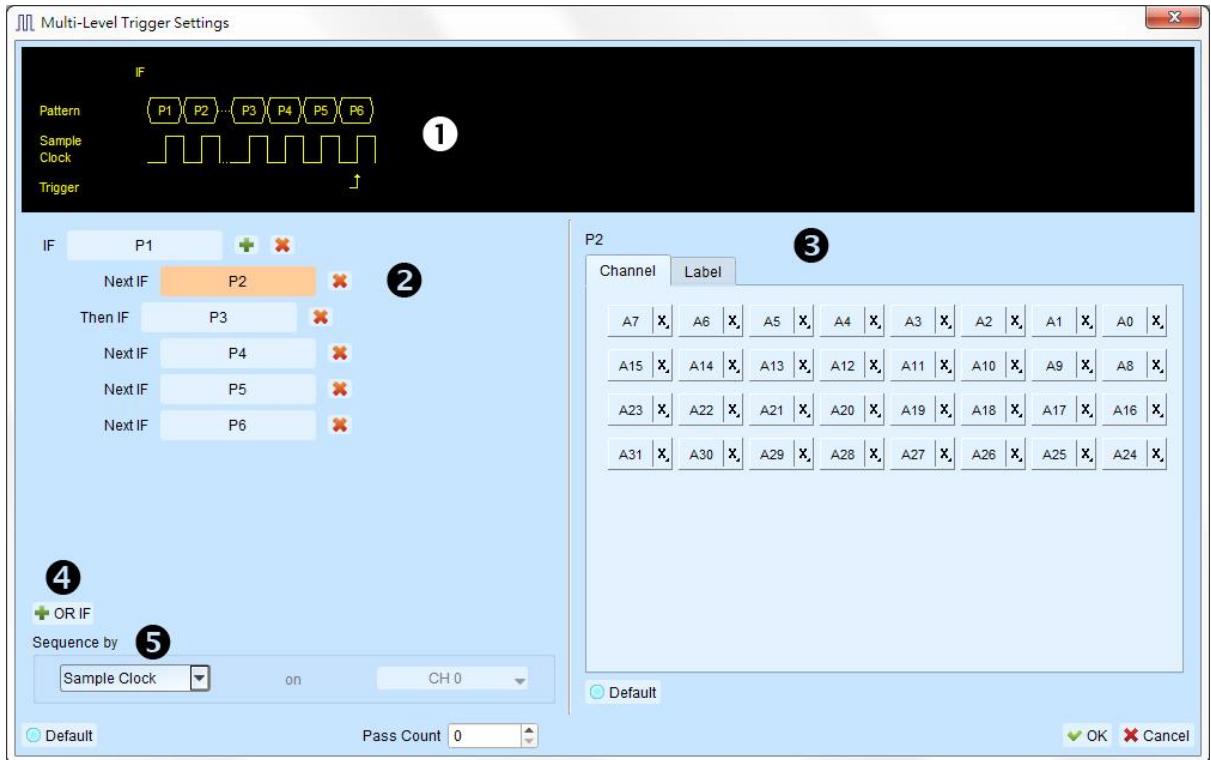

Difference between the continuous trigger and the non-continuous trigger lies in:

Continuous trigger: The signal captured by two adjacent sample clocks must meet the conditions to trigger.

Non-continuous trigger: It is triggered only when both the first condition and the second condition are met, no matter how many signals appear in between the first condition and the second condition.

Therefore, such a trigger condition is not continuous at all.

A continuous trigger mode is usually set when Synchronous or State is used for measurement, because the use of synchronous clock is usually in a measurement state, and the signal is in a continuous state. Under the Asynchronous or Timing situation, it is common for the signal at the changing edge to meet the continuous triggering condition, while it is difficult for most of the signals to meet the conditions of continuous triggering, and therefore it is suitable to set non-continuous trigger as a condition for them.

3. **The area to set the trigger condition for each class.**
4. **OR IF** is the condition for establishing a parallel trigger. At this point, each set of trigger conditions are judging the conditions at the same time. It is triggered when any set of conditions is met.
5. **Sequence by**


The user can also set incidental conditions for triggering. In general, the data taken at the sampling point are used for trigger settings. If you want the specified channel at the changing edge to be triggered only, you should use the “Sequence by” setting. With such a function, the user does not have to set trigger conditions for each change at the edge, but just focus on the data to be set.

For example, the signal data to be measured is valid only when the clock is at the rising edge. There are four data lines. In this case, you can set the Sequence by as Custom Rising, and then select the Clock pin as the valid condition for the data. Then, you can set the conditions for other data lines in accordance with Multi Level triggering conditions.

This function is not supported when the sampling frequency is above 2 GHz (inclusive).


- **Width Trigger**

The width trigger can set the trigger signal when the channel meets the trigger conditions and the length of the full pulse width.

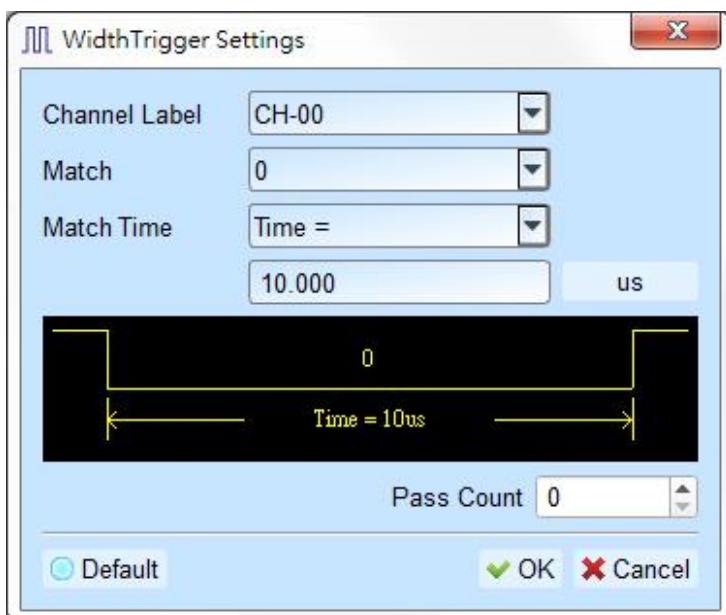

- **Timeout Trigger**


Timeout trigger can set the time width for trigger conditions. When the signal duration exceeds the set value, it will produce a trigger signal without waiting until a complete pulse is formed.

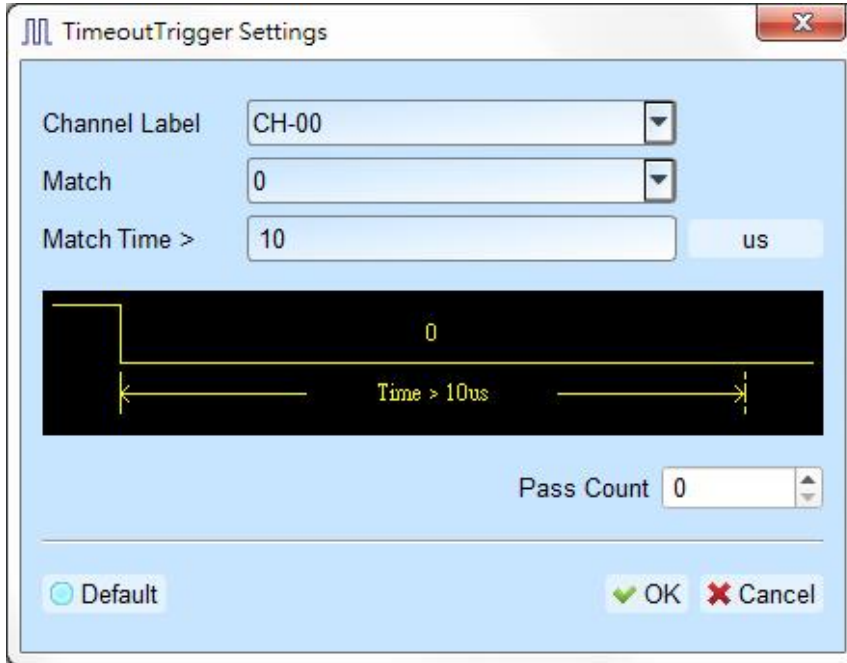

- **External Trigger**

The Trigger In input pulse signal of the device is taken as the trigger condition

Device Memory Usage

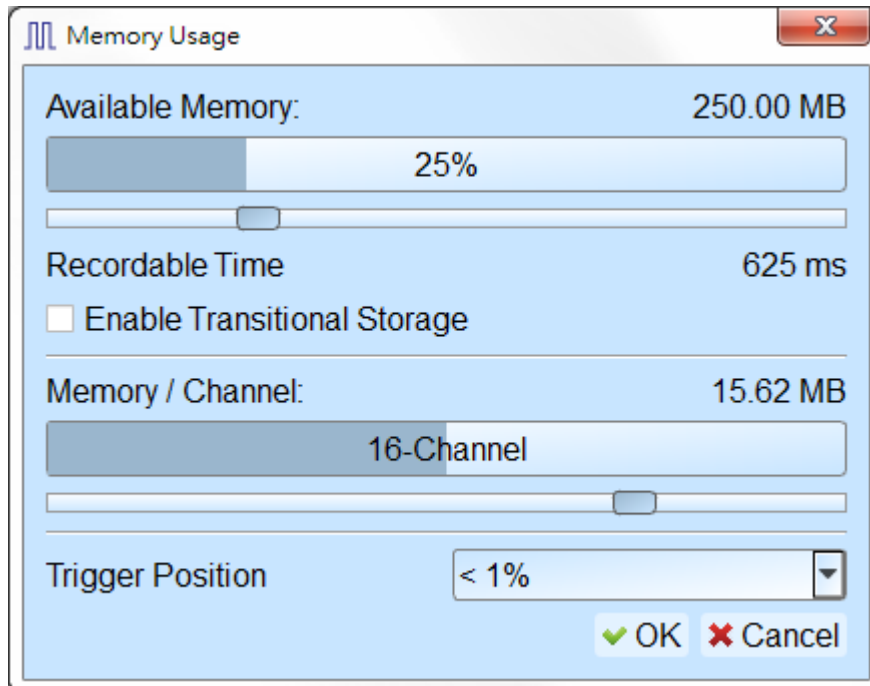


1. Device memory usage: Setup the storage depth for capturing data, the capture will be stopped when reach the setup value.
2. Recordable time: Estimate the length of the actual capture waveform based on the current settings. The time estimation will be disabled when using Transitional Storage mode.
3. Memory / Channel: The device allocates available memory based on the number of channels selected. The less the number of channels in use, the more memory can be allocated per channel.
4. Trigger position: Percentage is used to set the trigger point in the memory. For example, if 50% is set, it indicates that up to 50% of the device memory will be retained to store the pre-trigger data.

Threshold




- **Threshold Settings**

The threshold is defined as follows: When the level of the captured signal is higher than the threshold, it is Logic High, while lower than the threshold is called Logic Low. From the quick setting, you can select to set the commonly used voltage level, and then adjust the voltage. It is proposed that the threshold of a signal voltage to be measured is set at the half of the signal voltage.

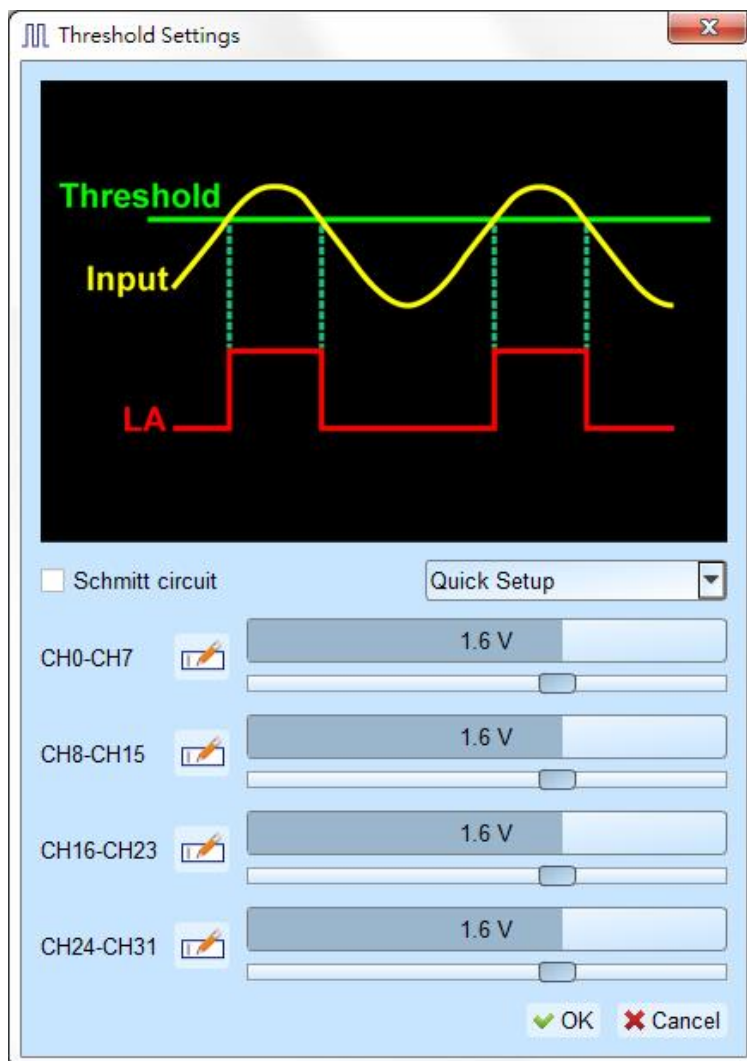

- **Schmitt Circuit Threshold Mode**

When the threshold is only one set of voltage and when the voltage is close to the threshold during the signal transition, the signal may be slowed down to allow the device to capture a signal that may be 0 or 1 at this critical point. This will cause trouble for viewing the waveform, as shown in Figure CH-01 below.

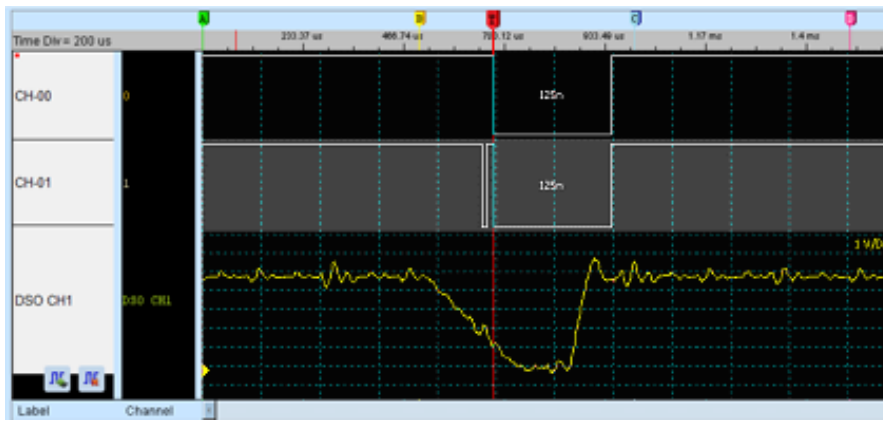

The use of a hardware surge filter (that is, Low-Pass Filter) may filter out the noise (Glitch) and solve this problem, but may filter out true noise or high frequency signals. Therefore, the use of hardware surge filter is not suitable for solving such problems.


Therefore, the appropriate approach is to use two sets of thresholds to determine the digital signal. In electronics, the use of Schmitt Trigger will cause the phenomenon of hysteresis on the voltage signal, thus eliminating noise interference and solving the phenomenon of signal jitter (transient state).

When using Schumacher Circuit functions, both channels must be used for measurements. Therefore, each measurement point must be connected with two test lines to form two sets of thresholds. As there is no limit on which set should be Threshold-High or Threshold High, you can arbitrarily select either one.


Threshold of the first set is A0-A15

Threshold of the second set is A16-A31


In actual wiring, the two sets must be paired. For example, A0 and A16 are paired, A1 and A17 are paired, and so on.

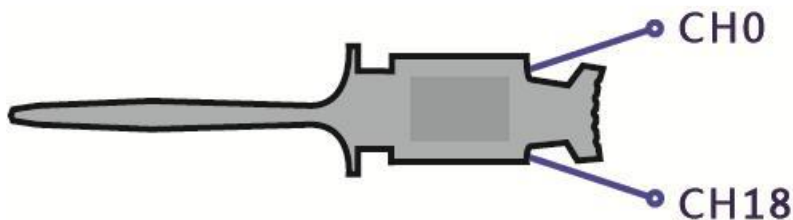

The rules for logic judgment are: The signal voltage to be measured must exceed Threshold-High to be logic 1, and when the signal drops, the signal voltage to be measured must be lower than Threshold-Low to be recognized as logic 0. Those signals between the Threshold-High and Threshold-Low are falling in the non-transposed area. The last logical state is shown as below:

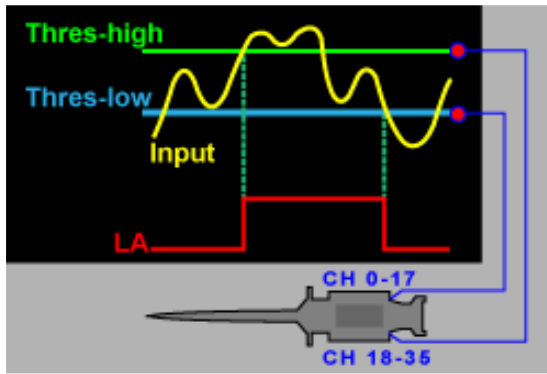

Stack Oscilloscope



Using TravelLogic and the Oscilloscope Stack functions, you need to install the special software provided by each oscilloscope brand. The software names are shown in the following table.

DSO brand	Software
Acute	Acute DSO software
Tektronix	Please download the TEKVISA CONNECTIVITY SOFTWARE from the Tektronix website.
Agilent Keysight	Please download the KEYSIGHT IO LIBRARIES SUITE from the Keysight website.
LeCroy	Please download the NI-VISA and Drivers from the NI website.
HAMEG	Please download the NI-VISA and Drivers from the NI website.
Rohde & Schwarz	Please download the NI-VISA and Drivers from the NI website.

Oscilloscope-supportive models:

DSO brand	Models	USB	TCP/IP
Acute	DS-1000 TravelScope	V	
Tektronix	TDS1000B/1000C/2000B/3000/3000B/ 3000C/5000B/7000 DPO2000/3000/4000/4000B/5000/7000 7000C/70000/70000B DSA70000/70000B MSO2000/3000/4000/4000B/5000 MDO3000/4000 TPS2000/2000B	V	V
Agilent	DSO1000A/5000A/DSO6000A/6000L 7000A/7000B/9000A MSO6000A/7000A/7000B/9000A DSO-X 4000A /MSO-X 4000A DSO-X 3000A /MSO-X 3000A DSO-X 2000A/MSO-X 2000A	V	V
Keysight	DSO-X 3000T MSO-X 3000T	V	V
LeCroy	WaveRunner / WaveSurfer / HDO4000 / HDO6000 / SDA 8 Zi-A / DDA 8 Zi-A		V
HAMEG	HMO3000/2000/1000	V	V
Rohde & Schwarz	RTO1000/RTE1000		V

There are two methods for hardware wiring:

TravelLogic is the Master, while the oscilloscope is the Slave.

Wiring direction is from TravelLogic’s Trig-Out → the oscilloscope’s Trig-In (see Figure 1)

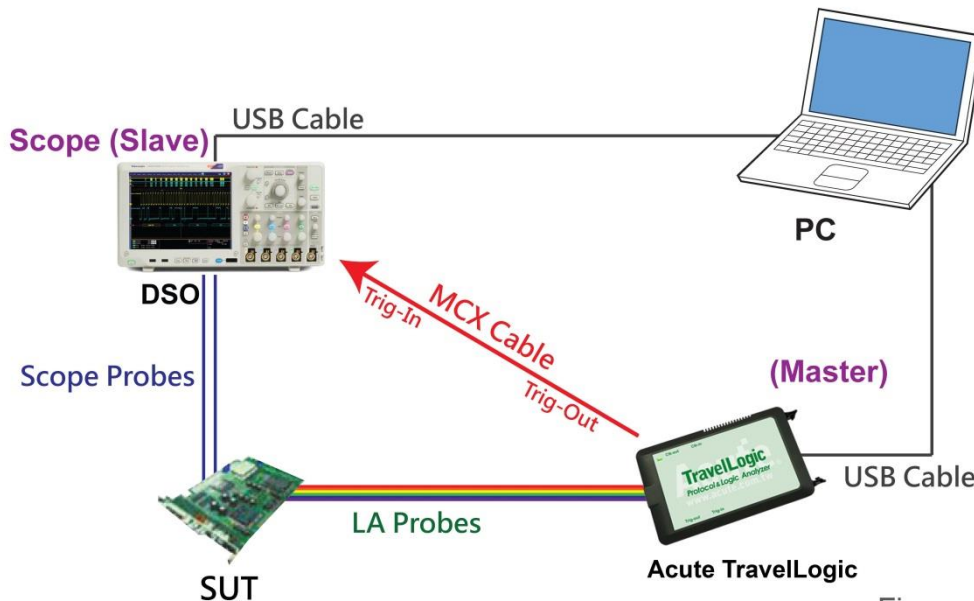


Figure 1

In Figure 1, the USB or Ethernet (TCP / IP) interface is connected to the computer, and then connect the BNC-MCX cable to the TravelLogic Trig-Out and the trigger input interface (Ext-Trig, Aux In or Trig-In) of the oscilloscope. MDO4000 series is fixed in the analog channel CH4.

The oscilloscope is the Master, while the TravelLogic is the Slave.

Wiring direction is from the oscilloscope’s Trig-Out → TravelLogic’s Trig-In (see Figure 2).



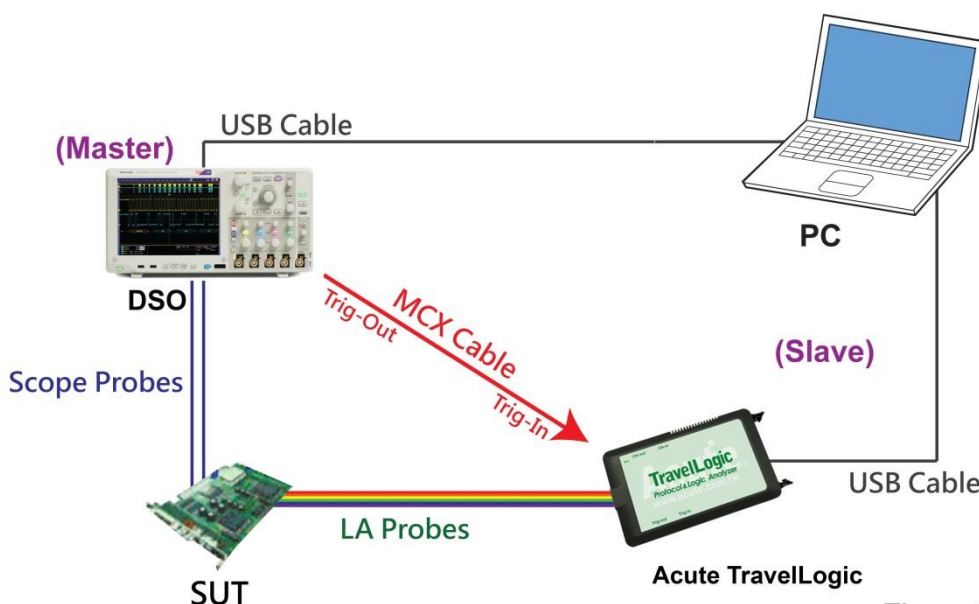


Figure 2

In Figure 2, the BNC-MCX cable is connected to the TravelLogic Trig-In and the trigger output interface (Trig-Out) of the oscilloscope. After completing the above actions, press the "Stack Oscilloscope" button, as shown below:

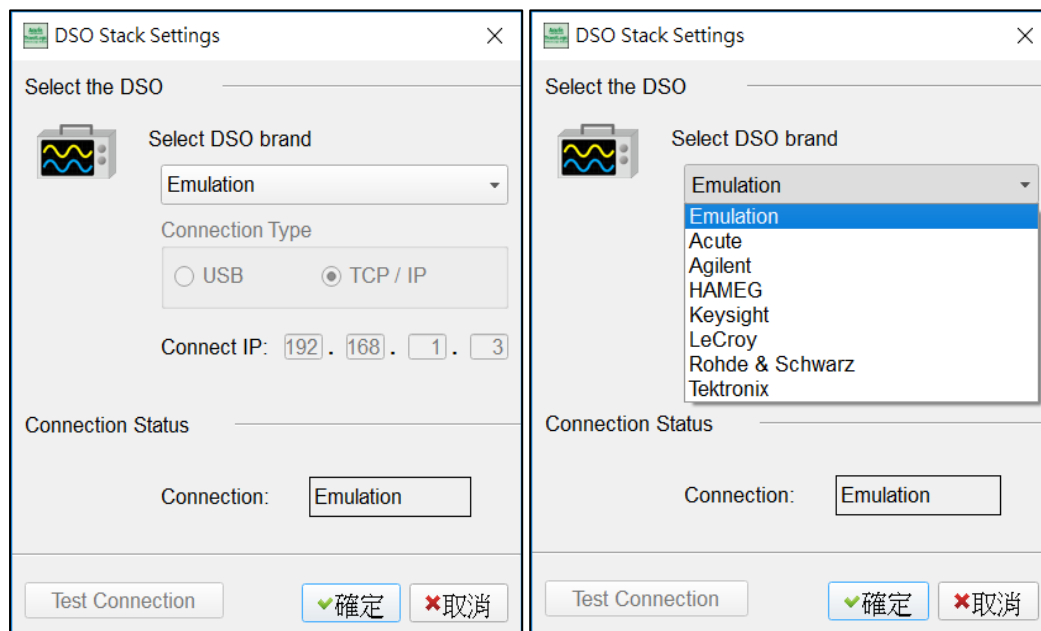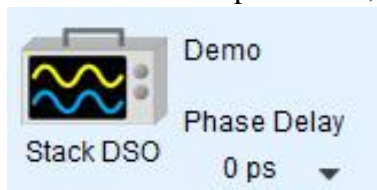

Select the DSO

Select the brand that needs to be stacked on the oscilloscope. When there is no DSO hardware available for stacking, emulation is the mode used to read back the storage files of DSO stack.

Connection Type

It can be used to select USB, TCP / IP, according to the connection interface provided by the oscilloscope brands.

Connect IP


It can be used to select TCP / IP for the connection mode and enter IP address. When the Ethernet crossover cable is used, it is recommended that the IP settings of the two machines be 192.168.1.2 and 192.168.1.3 respectively. Gateway is the same, set to 192.168.1.1, and

DHCP is set to OFF. If the IP setting does not take effect, please disable and then enable the network, or reboot to make the network settings effective.

Test Connection / Connection Status


It can be used to connect the oscilloscope / display the current stack oscilloscope model and automatically add the oscilloscope channel to the waveform window.

Screen of oscilloscope stack

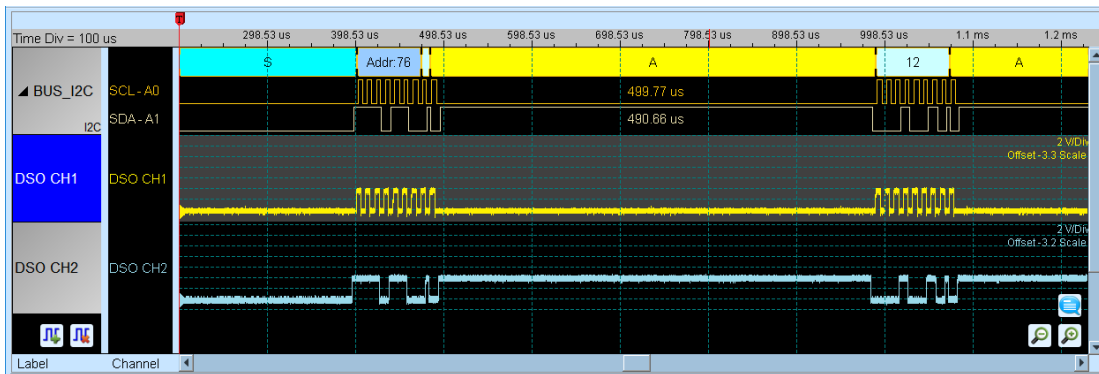

Oscilloscope is set as the master, while the TravelLogic is set as the slave


If the stack is composed of the oscilloscope as the master and TravelLogic as the slave, you must not only complete the above-mentioned basic settings but also set the external trigger signal. For the hardware wiring, please refer to Figure 2. Press "Trigger Condition" → "External Trigger", as shown below.

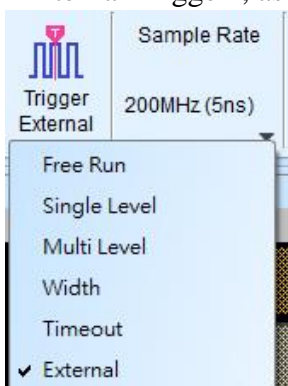

Stack Delay

When TravelLogic is triggered successfully, the Trig-Out signal is transmitted through Cable to the DSO with a time delay, resulting in a deviation between the logic and the analog signal time displayed by the waveforms. Therefore, the stack delay time must be set to compensate the delay. In the waveform display screen, you can put the mouse on the top of the DSO

waveforms, hold down the Shift key, and then use the mouse's left button to drag the DSO waveforms to the appropriate location to complete the stack delay correction.

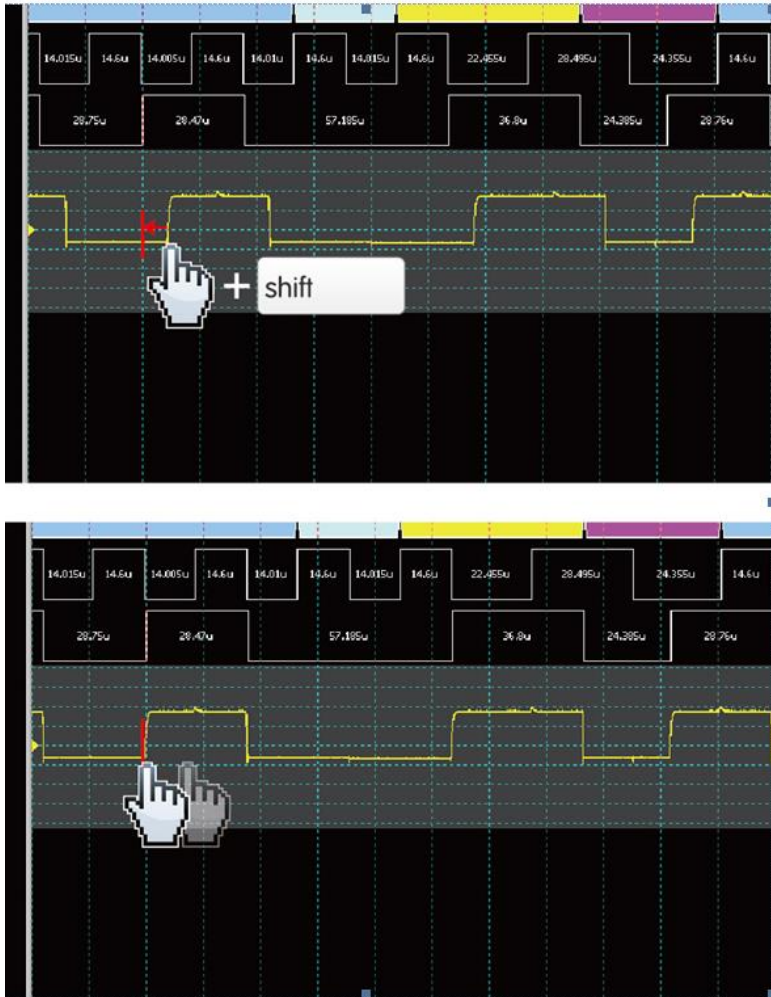

Stacking line:


Standard MCX-MCX line for Acute DSO



Optional BNC-MCX line (50cm or 100cm) for standalone DSOs



Advanced Capture Setting

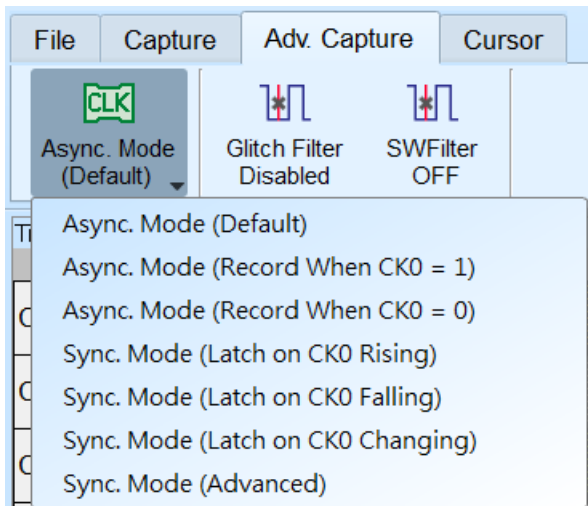

- **Capture mode setting**

Asynchronous mode:

Asynchronous mode, also known as timing Analyzer, is based on the internal clock as a sampling frequency. It is recommended that the sampling frequency be set at about 10 times the signal to be measured, with the minimum not less than 5 times. Any rates lower than 5 times will cause distortion. Asynchronous sampling will cause sampling error from the actual capture to the signal, with the error time being the reciprocal of the sampling frequency.

The default mode is to capture the signal at the sampling frequency. If you want to increase the signal capture frequency, you can add a qualifier by selecting CK0 and setting a channel to be 0 or 1. For example, when Chip Select is 0 to allow to capture the signal, you can select the asynchronous mode (recorded when CK0 = 0) to add the qualifier. After the qualifier condition is selected, the device will automatically turn on the transpose mode to capture the signal.

Synchronous mode:


Synchronous mode, also known as the state Analyzer, uses the external input clock as the sampling frequency. The channel marked with CK0 on the signal line is the external clock input channel. When the external clock stops, the signal capture will also stop, forming a synchronous operation between the two.

Easy setting

CK0 is used as the input clock when it is at the edge of Rising / Falling / Either.

Advanced setting

The content of the easy setting looks like the following figure. Only the Ck0 at the changing edge is used for synchronous sampling.

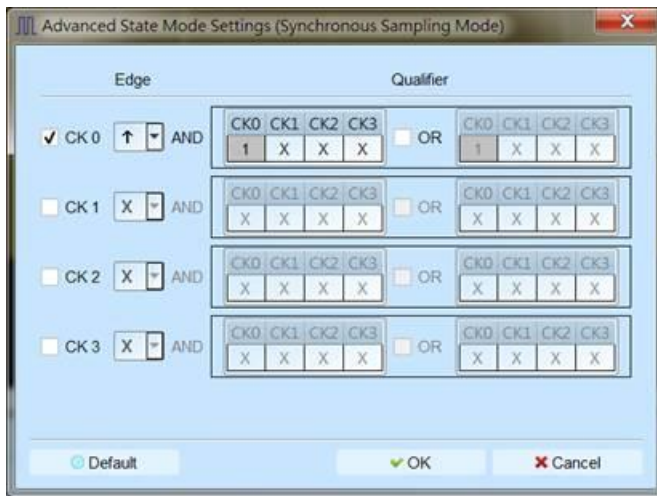

Advanced setting allows you to use multiple sets of Edge conditions to sample at the same time. Each set of Edge conditions has two sets of qualifiers, any of which is met, sampling will take place immediately. Take the following conditions as an example:

CK0↑+Ck3=0 Sampling will take place immediately.

CK0↑+Ck2=1 Sampling will take place immediately.

CK2↓ Sampling will take place immediately.


CK[3:0]=1001 or 0010 Sampling will take place immediately (without referring to the Edge conditions).



• **Glitch filter settings**




The hardware glitch filter function is used to filter out unwanted glitches and logical misjudgment caused by slow transitions. It can be regarded as a low-pass filter to remind the user that the glitches may sometimes lead to poor quality of data transmission. You can use the Logic Analyzer and Oscilloscope Stack to determine the signal integrity and whether there are unexpected glitches.

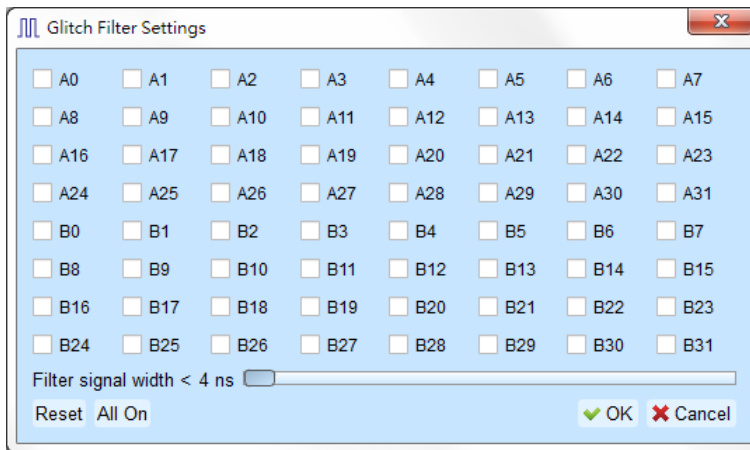

This filter function can be set to filter the signals of less than 5ns-35ns wide. After this filter function is enabled, it will filter before the hardware is triggered. Channels that use the glitch filter function are marked with a red dot on the channel label for identification.


• **Software Glitch filter settings**

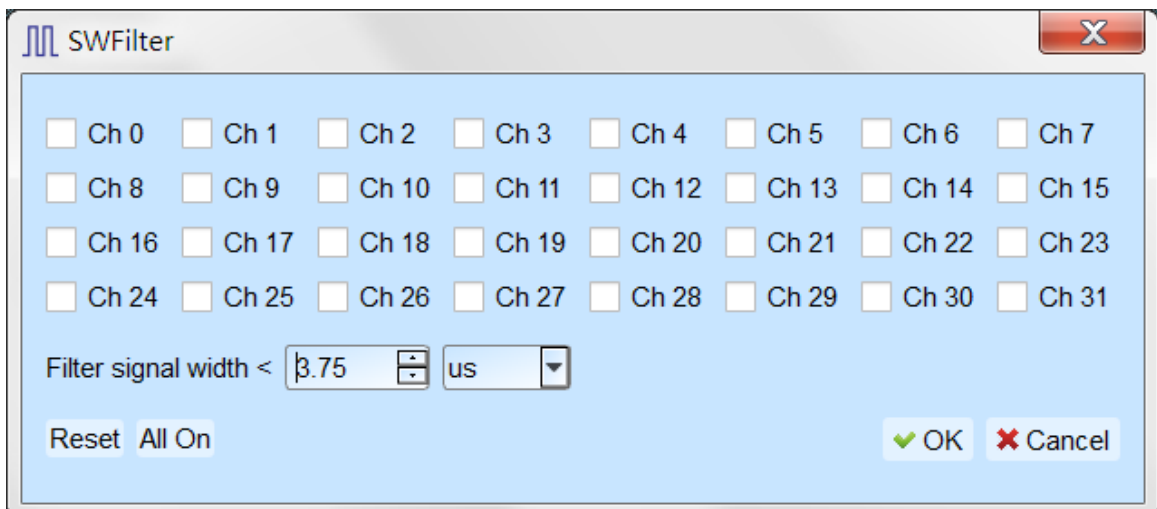


This filter function can be set to filter the signals with pulse width range from 1ps to 1ms. Applying this filter function will only change the display and decode contents, the trigger and recordable time will remain not effected. Disabling this filter function will restore all waveform contents back to the original un-filtered waveform.

Cursor

This function includes the cursor setting and the waveform search function matching the cursor.

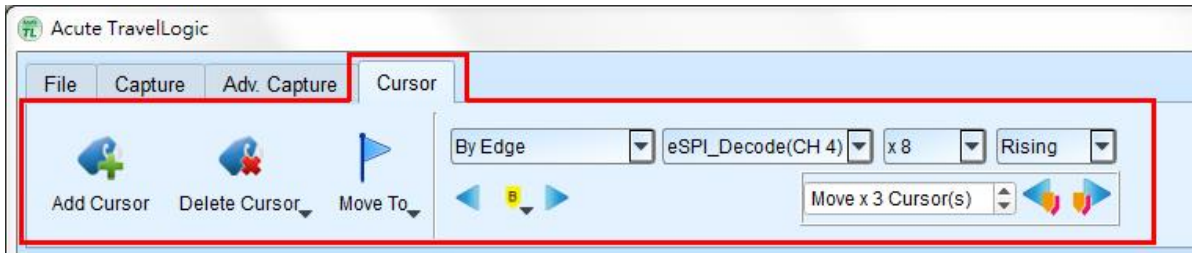

Move To: Move the focused timestamp position in the waveform area according to the selection.

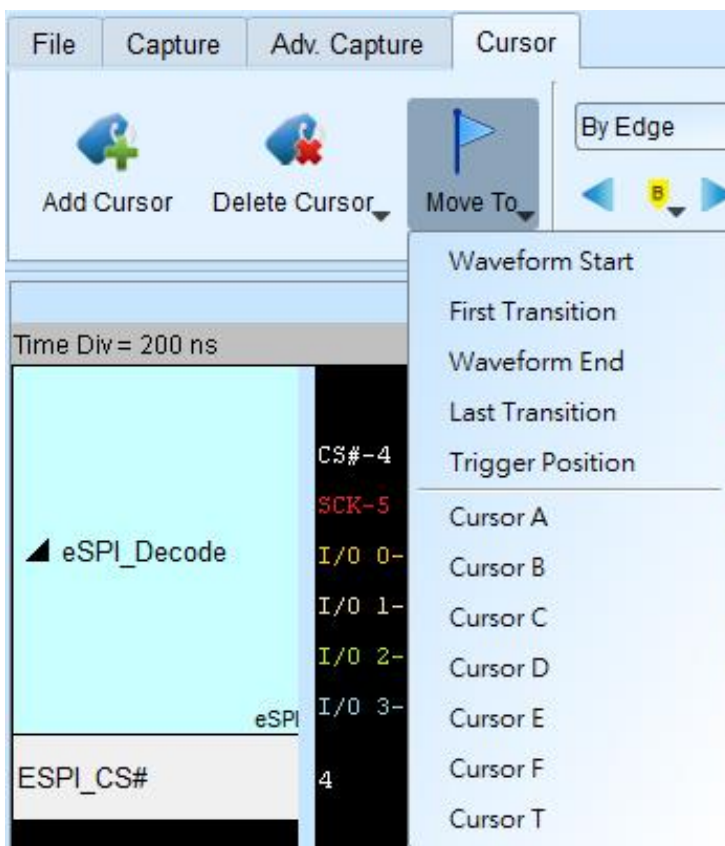

Waveform Start: Move to the beginning of waveform

First Transition: Move to first waveform transition

First Transition on Selected Label: Move to first waveform transition of selected label

Waveform End: Move to the end of waveform


Last Transition: Move to the last waveform transition

Last Transition on Selected Label: Move to the last waveform transition of selected label


Trigger Position: Move to the trigger position

Cursor A-Z: Move to the Cursor position


Waveform search is divided into four modes:

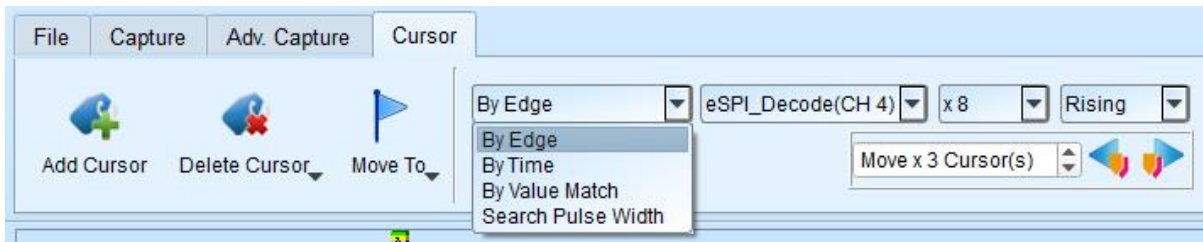


1. **By Edge:** Move the specified cursor position according to the number of Rising / Falling / Either edges (x1 ~ x4096) of the specified channel.

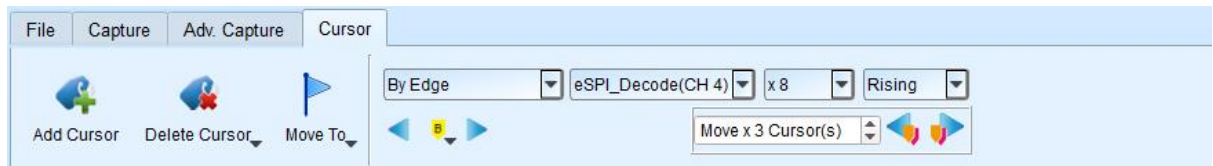

2. **By Time:** Move the specified cursor position forward or backward to specify the amount of time.

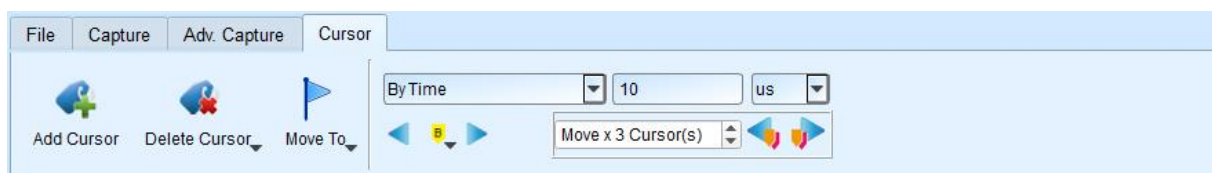

3. **By Value Match:** In search of displayed value content of the specified channel, if the specified channel is the bus Protocol, the text comparison will be used for the search; if the specified channel is the bus or channel, the numerical comparison will be used for the search.

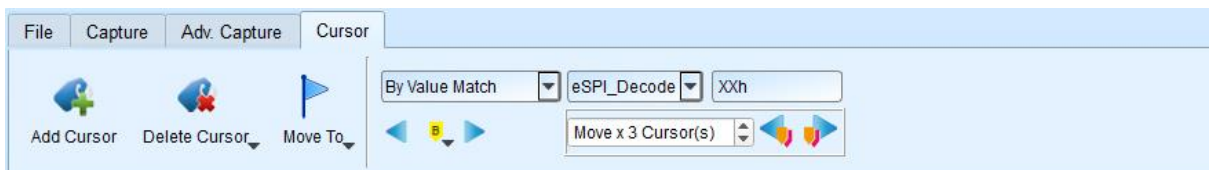

4. **Search Pulse Width:** The waveform pulse widths meeting the conditions can be searched on the specified channels. The single-cursor movement function on the left side or the multiple-cursor movement function on the right side can be used on any operation meeting or exceeding the conditions.



The starting point of the search is set to the current position of the selected cursor.


Cursor usage:

The cursor system has two special-purpose cursors: the triggering cursor T and the search-specific cursor B, respectively.

To add a new cursor, you can use the left mouse button to click the “Add Cursor Button”



() on the top or press the Shift+ letter key. To delete a cursor, you can click the “Delete

Cursor Button” () on the top.


Cursor movement method:

1. Using the left mouse button to drag the cursor sign or cursor line on the top of the waveform window, you can achieve the purpose of moving the cursor.
2. Use the keyboard A-Z to quickly navigate to the mouse cursor location.
3. Use the keyboard Shift + A-Z to move the cursor to the place where the mouse cursor is.
If the cursor does not exist, you can add the cursor to the mouse cursor without dragging the cursor.

The value on the frequency / time display bar at the bottom right of the screen will change as the cursor moves.



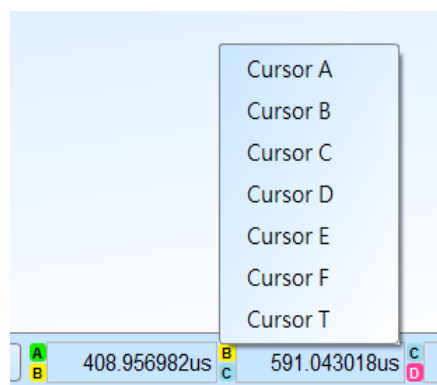

From left to right are the interval time, frequency calculation, the number of sampling statistics, respectively.




Clicking the cursor name, you can switch the cursor.

Waveform Area


1. Use the left mouse button to drag the waveform in the waveform display area.
2. You can use the mouse wheel or click the zoom in button on the screen to zoom the waveforms in or out .
3. To add text / graphic annotation , you can add text or graphic annotation data in the waveform area.
4. Quick calculation function

If you press the right button to drag in the waveform display area, you can circle the range to be observed, and show the number of signal transitions in the observation interval, the length of time and the average frequency information. This function can also be used in the waveform display area under the protocol Analyzer mode.

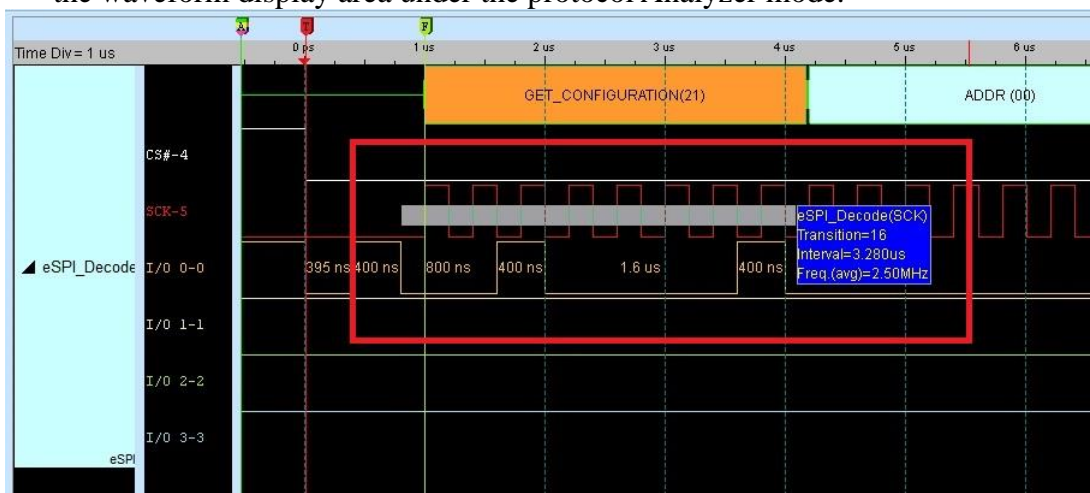


5. Add/Delete the waveform label.


- Add labels

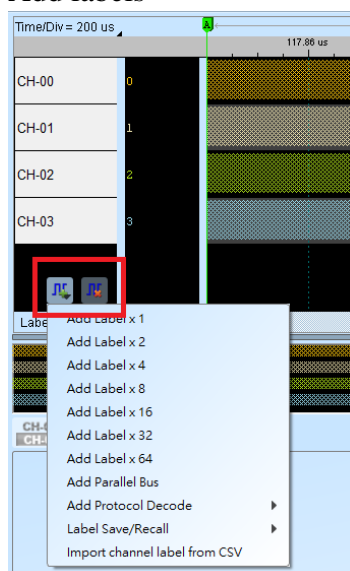

● Add parallel bus

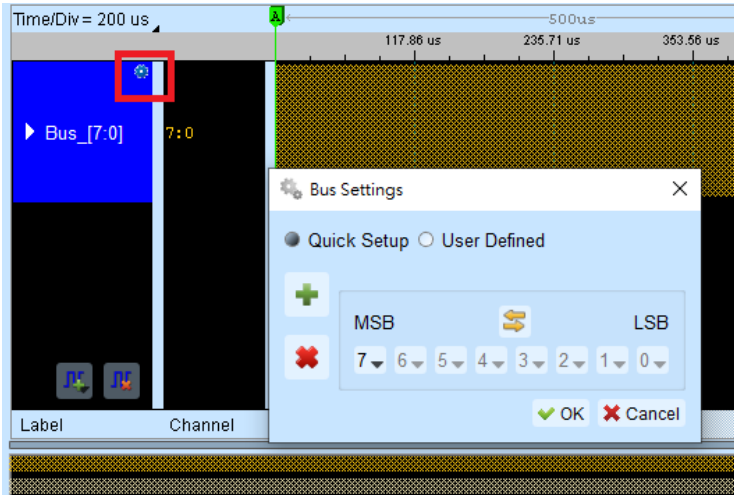

● Add protocol decode

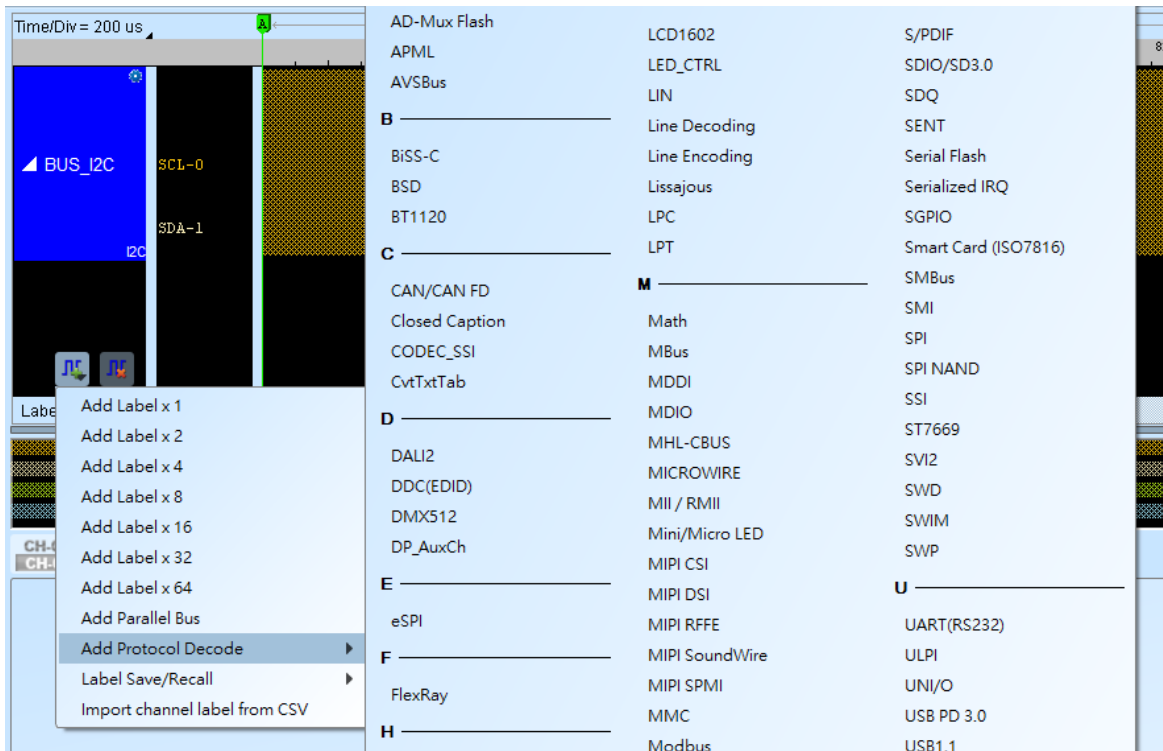


- Label Save/Recall: Save the current channel settings or load the saved channel label.
- Import channel label from CSV file. The file format like the following,

	A	B	
1	name1	1	
2	name2	2	
3	name3	3	
4	name4	4	
5			

Notice: The feature can only import channel name and number. It can't import parallel bus or protocol decode.

Report Area

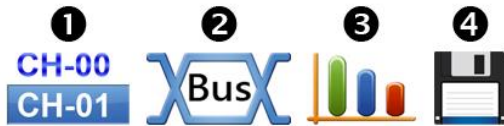

1. Display the channel status.
2. Display the results of the bus decode, or create customize report from multiple decodes.
3. Waveform data statistics

When setting, select the channel and determine the type of statistics. If you only need to count the specific range, you can use the cursor to select the specified range. By default, the range is the entire waveform area. To apply the same measurement values to other channels, you need only click and drag the items to be copied, and multiple sets of the same measurements will be added to the other channels. To add a variety of measurement values on the same channel, you need only to click and drag on the channel name, and a number of different types of measurements will be added.

Type	Channels
Period	1
Frequency	1
Edge Count	1
Cycle Count	1
Positive Cycle Count	1
Negative Cycle Count	1
Positive Pulse count	1
Negative Pulse count	1
Positive Pulse Width	1
Negative Pulse Count	1
Channel-to-Channel Rising Delay	2
Channel-to-Channel Falling Delay	2
Channel Rising to Channel Falling Delay	2
Channel Falling to Channel Rising Delay	2
Phase Delay	2


4. Report area storage

Report contents can be saved as text files.

Bus decode Settings

Please see the bus trigger and Analyzer manual

Customized Report Settings

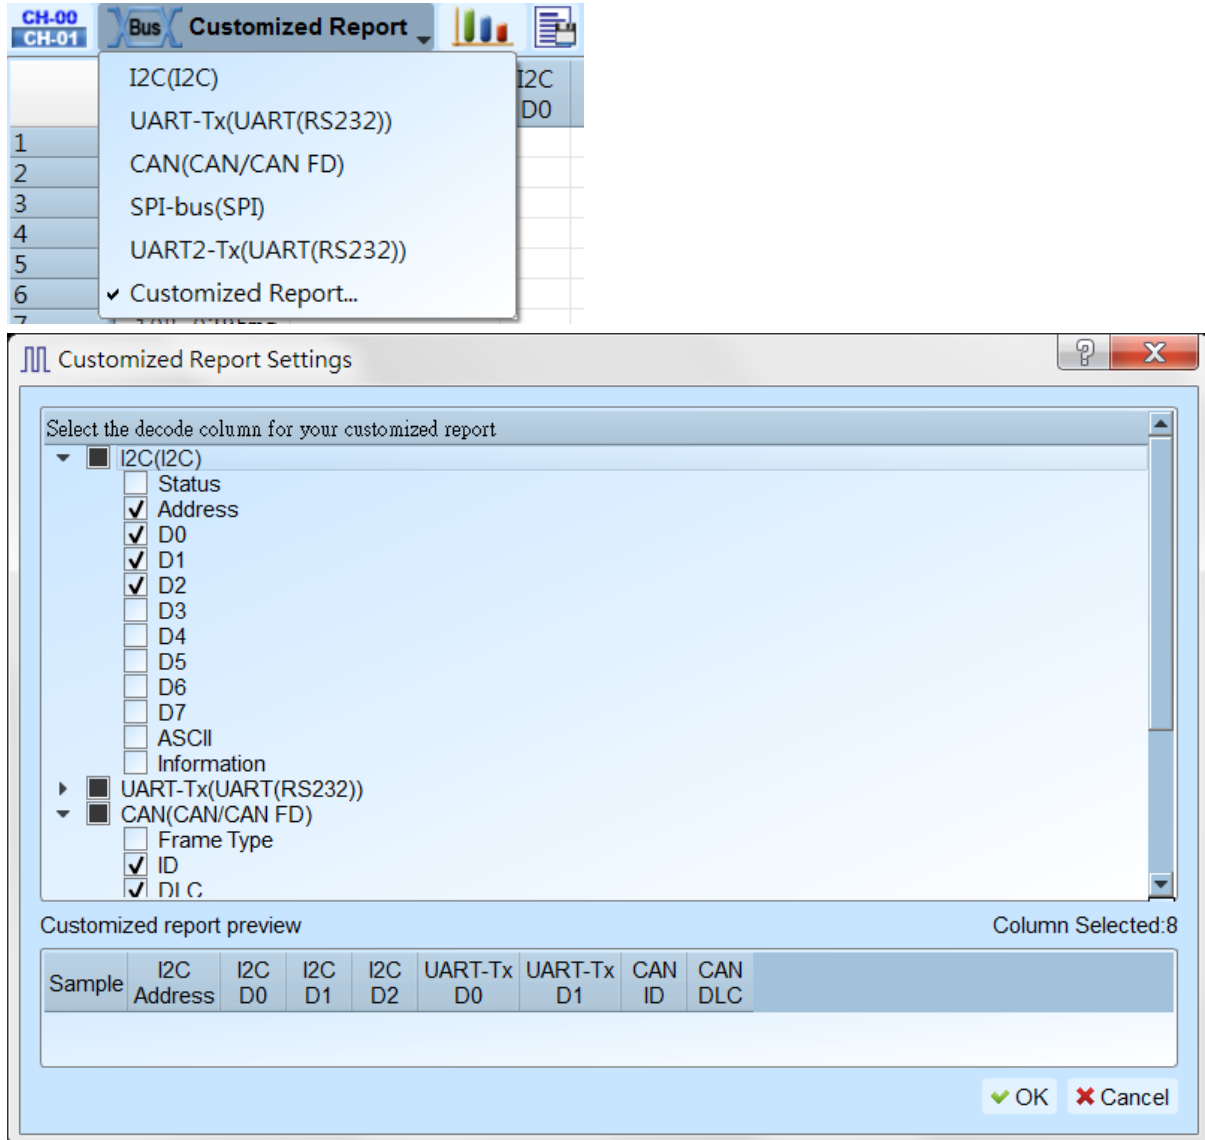

All Bus Decoders enabled in waveform area will be listed in the setting window, you may select interested columns from each Reports, the preview window will show how many columns you have selected and combine them to create your customized report.

Note: The Bus Decoders must be setup correctly in order to fetch the correct column names for the customized report.


Chapter 3 Technical support

Contact information

Acute website: <http://www.acute.com.tw>

E-Mail: service@acute.com.tw


Tel: +886-2-29993275 Fax: +886-2-29993276

If  shows up in the Demo mode during the execution of

TravelLogic software, please try the following steps to solve the issue:

- (1) Install the latest version of the TravelLogic software, please go to the official website of [Acute Technology Inc. - Download - Software](#), and then select the [TravelLogic](#) to download and install.
- (2) Please use the original USB3.0 Cable in the kit.
- (3) Go to the device manager and check the driver status.

Please connect the device USB cable to the computer and then go to the system device manager to check whether the Acute USB BootLoader or Acute USB3.0 Product shows up. Please go to the [Acute Website - Download - Software](#), download the [USB3.0 driver](#) and follow the troubleshoot manual in the package to reinstall the driver.

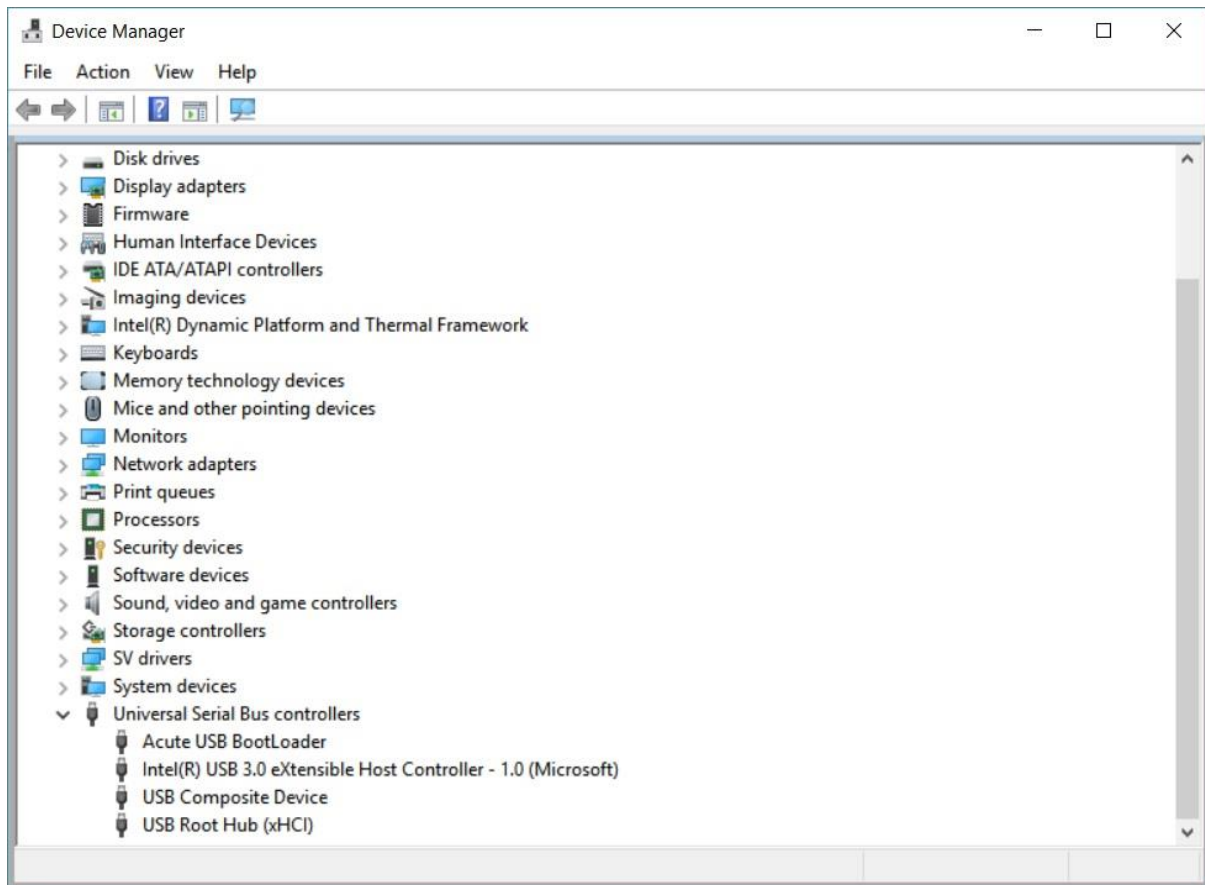

- (4) Remove all probes and re-plug the USB3.0 Cable or restart the computer to check whether the driver appears.
- (5) After the above steps are taken but the problem is still there, please contact us.